

Liebert® IntelliSlot™ Unity™ Card

User Manual—Web, SNMP, Modbus, BACnet, YDN23

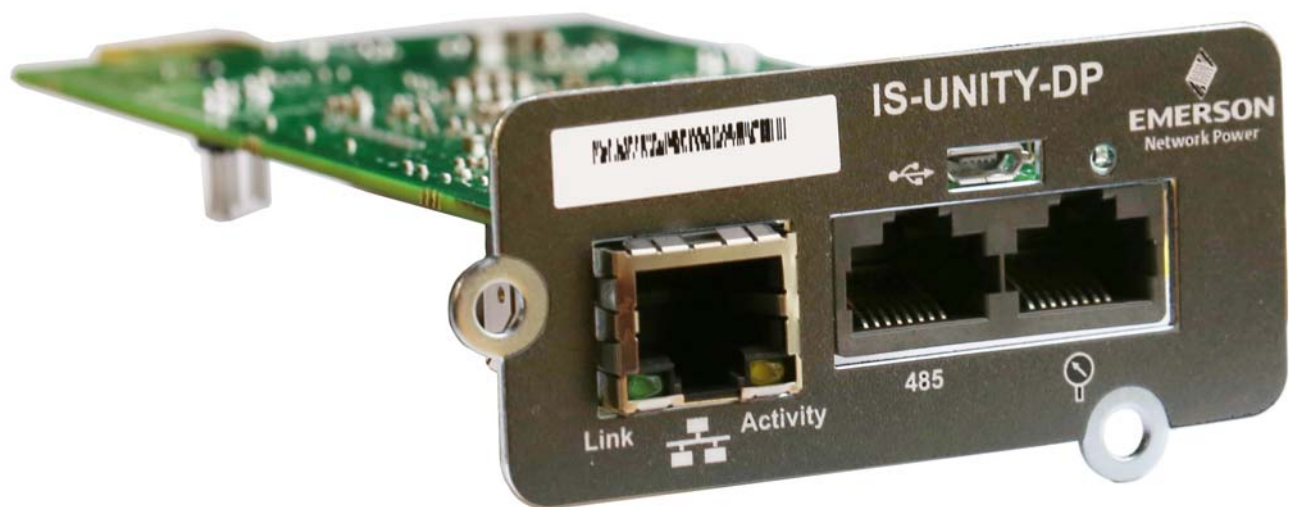


Table of Content

IMPORTANT SAFETY INSTRUCTIONS	1
1.0 INTRODUCTION	2
1.1 Protocols	2
1.2 Compatibility With Other Emerson Products and Communication Protocols	3
1.3 Support for Liebert SN Sensors	4
2.0 INSTALLATION	5
2.1 Installing the Liebert IntelliSlot Unity Card	5
2.1.1 Assigning the Card's IP Address	5
2.1.2 Connect an Ethernet Cable	6
2.1.3 Connect an RS-485 Serial Cable	7
2.2 Change User Names and Passwords Immediately	7
2.3 Configure the Card	8
2.4 Installing Multiple Liebert IntelliSlot Unity Cards in a System	9
3.0 ENABLE COMMUNICATION PROTOCOLS	11
3.1 Enable Protocols	11
3.1.1 Enable Modbus Protocol	12
3.1.1.1 Configure Modbus TCP	12
3.1.1.2 Configure Modbus RTU	13
3.1.2 Enable BACnet Protocol	14
3.1.2.1 Configure BACnet IP Protocol	15
3.1.2.2 Configure BACnet MSTP Protocol	16
3.1.3 Enable SNMP	17
3.1.3.1 Configure SNMP Settings	18
3.1.3.2 Configure SNMPv3	18
3.1.3.3 Configure SNMPv1 Trap Settings	19
3.1.3.4 Configure SNMPv1/v2c Access Settings	20
3.2 Download Protocol Mappings	21
4.0 LIEBERT INTELLISLOT UNITY CARD WEB PAGE LAYOUT	22
4.1 Web Page Sections	22
4.3 Managed Device Tab Menus	26
4.4 Communications Tab Menus	27
4.5 Sensor Tab Menus—Shown Only if a Sensor is Connected	28
4.5.1 Sensor Tab Summary Page	29
4.5.2 Sensor Tab Summary Page-Details Pane	29
4.6 Changing Sensor Order	31

5.0 EDIT THE LIEBERT INTELLISLOT UNITY CARD CONFIGURATION	32
5.1 Web Page Communications Tab Folders	33
5.1.1 Communications Tab-Active Events Folder	33
5.2 Communications Tab-Downloads Folder	33
5.3 Communications Tab-Configuration Folder	33
5.3.1 Configuration Folder—System	34
5.3.1.1 Time Service Settings	34
5.3.2 Configuration Folder—User	35
5.3.3 Configuration Folder—Network	35
5.3.3.1 IPv4/IPv6	36
5.3.3.2 Domain Name Server (DNS) Test	37
5.3.4 Configuration Folder—Web Server	37
5.3.5 Configuration Folder—LIFE™	38
5.3.6 Configuration Folder—Emerson Protocol	38
5.4 Configuration Folder—Messaging	38
5.4.1 Email	38
5.4.2 Email Settings	39
5.4.3 SMS	40
5.4.4 Messaging Test	41
5.5 Communications Tab—Protocols	41
5.6 Protocols Folder—BACnet Folder	42
5.6.1 Protocols Folder—BACnet IP Folder	42
5.6.2 Protocols Folder—BACnet MSTP Folder	43
5.7 Protocols Folder—Modbus	43
5.7.1 Modbus TCP	43
5.7.2 Modbus RTU	44
5.8 Protocols Folder—SNMP Subfolder	45
5.8.1 SNMPv3 User Settings	46
5.8.2 Edit the SNMPv3 Table	47
5.8.3 SNMPv1 Trap Settings	48
5.8.4 SNMPv1/v2c Access	49
5.9 Protocols Folder—YDN23 Protocol	50
5.10 Configuration—Communications Tab-Status Folder	51
5.11 Configuration—Communications Tab-Support Folder	51
5.11.1 Communications Tab-Support Folder—Active Networking	52
5.11.2 Communications Tab-Support Folder—Firmware Update	53

6.0 FIRMWARE UPDATES	55
6.1 Updating the Liebert IntelliSlot Unity Card's Firmware	55
6.2 Revert to Alternate Firmware	56
APPENDIX A - CONFIGURATION FOLDER—LIFE™ SUB FOLDER	58

List of Figures

Figure 1-1 Liebert IntelliSlot Unity-DP card features	2
Figure 2-1 Command prompt access	7
Figure 2-2 Change administrator and general user names and passwords	8
Figure 2-3 Enabling the communication protocol—IPv4 or IPv6	9
Figure 3-1 Enable protocols; enable commands	12
Figure 3-2 Modbus TCP-Trusted IP List.	13
Figure 3-3 Modbus-RS-485	14
Figure 3-4 BACnet protocol settings	15
Figure 3-5 BACnet IP	16
Figure 3-6 BACnet MSTP	17
Figure 3-7 SNMP	18
Figure 3-8 SNMPv3 user settings	19
Figure 3-9 SNMPv1 trap settings	20
Figure 3-10 SNMPv1/v2c Access settings	21
Figure 4-1 Web page sections, UPS example	23
Figure 4-2 Web page sections, Thermal Management unit example	23
Figure 4-3 Managed Device Web page without sensors	24
Figure 4-4 Help text on mouse-over	25
Figure 4-5 Managed Device Tab examples, Liebert GXT4™ and Liebert CRV™	26
Figure 4-6 Sensor Tab menu	28
Figure 4-7 Sensor Tab-Summary page layout	29
Figure 4-8 Sensor details—Door closure and temperature sensor examples	30
Figure 4-9 Changing sensor order	31
Figure 5-1 Editing configuration settings	32
Figure 5-2 Configuration folder, System subfolder	34
Figure 5-3 Configuration folder, System subfolder, Time Service.	34
Figure 5-4 IPv4/IPv6 settings	36
Figure 5-5 Edit the SNMPv3 table	47
Figure 6-1 Ethernet port	55
Figure 6-2 Firmware update screen	56

List of Tables

Table 1-1: Compatibility with Liebert equipment	3
Table 1-2: Liebert IntelliSlot card communication protocols	3
Table 4-1: Help text and icons	24
Table 4-2: Communications Tab menus	27
Table 4-3: Sensor Tab folders.	28

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS



WARNING

Risk of improper installation. Can cause equipment damage, injury or death.

Only a qualified service professional should install these products. Emerson recommends having an Emerson Network Power® Liebert Services representative perform the installation in large UPS's. Contact Liebert Services at 1-800-LIEBERT (1-800-543-2378).



WARNING

Risk of electric shock. Can cause equipment damage, injury or death.

Service and maintenance work must be performed only by properly trained and qualified personnel and in accordance with applicable regulations and manufacturers' specifications.

Opening or removing the covers to any equipment may expose personnel to lethal voltages within the unit even when it is apparently not operating and the input wiring is disconnected from the electrical source.

Check the circuits with a voltmeter before beginning installation.


1.0 INTRODUCTION

This Liebert IntelliSlot Unity platform delivers enhanced communication and control of AC Power, Power Distribution and Thermal Management products. The platform communicates with Emerson Network Power® software tools and services, including Trellis®, LIFE™ Services, Liebert SiteScan Web™ and Liebert Nform®.

The platform includes the Liebert IntelliSlot Unity-DP™ and Liebert IntelliSlot Unity LIFE™ cards.

Each card employs the Emerson Protocol to monitor and manage a wide range of operating parameters, alarms and notifications about power, distribution and cooling equipment. The cards also communicate with Building Management Systems and Network Management Systems. Liebert IntelliSlot Unity cards support monitoring of sensors to improve system reliability and efficiency.

Figure 1-1 Liebert IntelliSlot Unity-DP card features

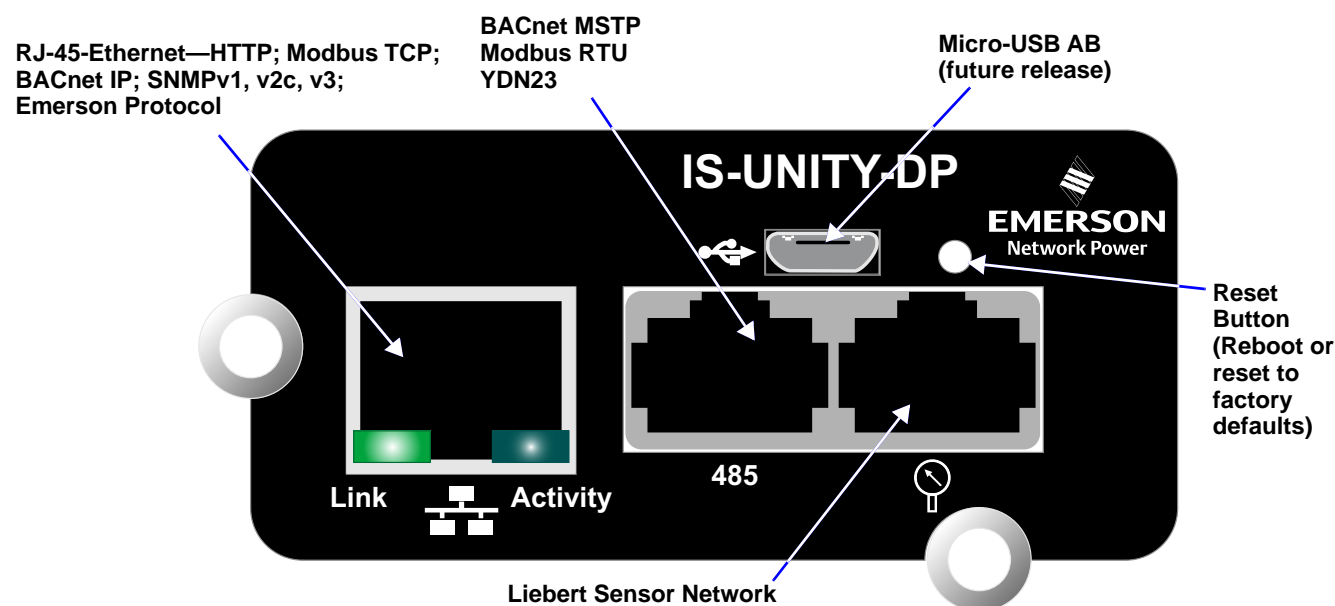

1.1 Protocols

Each card supports the Emerson Protocol, Remote Service Delivery Protocol and HTTP Web by default.

The Liebert IntelliSlot Unity-DP supports selecting two third-party protocols; the Liebert IntelliSlot Unity LIFE card supports the default protocols only (Emerson Protocol, Remote Service Delivery Protocol and HTTP Web).

Available protocols are

- BACnet IP—BACnet over Internet Protocol
- BACnet MSTP—BACnet Master-Slave/Token-Passing (MSTP) communications protocol over a RS-485 serial network (also known as BACnet MSTP RS-485)
- Modbus RTU—Modbus Remote Terminal Unit (RTU) communication protocol over a RS-485 serial network (also known as Modbus RTU RS-485)
- Modbus TCP—Modbus Transmission Control Protocol over Internet Protocol (also known as Modbus TCP/IP)
- SNMP
- YDN23 - YD-T-1363 specification protocol (also known as YD/T 1363)

1.2 Compatibility With Other Emerson Products and Communication Protocols

The Liebert IntelliSlot Unity platform includes:

Table 1-1 Compatibility with Liebert equipment

Liebert IntelliSlot Card	Compatible with:
Liebert IS-UNITY-DP Liebert IS-UNITY-LIFE	Liebert APM TM , Liebert APS TM , Liebert Challenger 3000 TM , Liebert CRV TM , Liebert CW TM , Liebert DCP TM , Liebert Deluxe System/3 TM , Liebert DS TM , Liebert DSE TM , Liebert eXL TM , Liebert eXM TM , Liebert GXT3 TM , Liebert GXT4 TM , Liebert HPC TM , Liebert HPC-S/M/R/W/Generic TM , Liebert HPM TM , Liebert NX TM 225-600 kVA, Liebert NXC TM , Liebert NXL TM *, Liebert NXR TM , Liebert PCW TM /PDX TM , Liebert PeX TM *, Liebert XDC TM , Liebert XDP TM , Liebert XDP-Cray TM

The Liebert IntelliSlot Unity-DP platform supports the following protocols:

Table 1-2 Liebert IntelliSlot card communication protocols

Liebert IntelliSlot Card (Part #)	Communication Protocols Available								
	HTTP HTTPS	Emerson Protocol	Remote Service Delivery Protocol	Email	SMS	SNMP v1, v2c, v3	BACnet IP BACnet MSTP	Modbus TCP Modbus RTU	YDN23 *
Liebert IS-UNITY-DP (IS-UNITY-DP)	✓	✓	✓	✓	✓	✓	✓	✓	✓
Liebert IS-UNITY-LIFE (IS-UNITY-LIFE)	✓	✓	✓	—	—	—	—	—	—

* YDN23 applicable only to Liebert PeX and Liebert NXL.

The Liebert IntelliSlot Unity platform supports both 10Mbit and 100Mbit communication speeds and either half or full duplex.

Sensor Support

The Liebert IntelliSlot Unity platform supports these sensors: Liebert SN-2D, Liebert SN-3C, Liebert SN-L, Liebert SN-T, Liebert SN-TH, Liebert SN-Z01, Liebert SN-Z02 and Liebert SN-Z03.

Password Protection

Control and configuration capabilities are protected by an administrator's username and password combination. Optionally, status information can be password-protected. The default user name for the administrator is *Liebert* and the default password is also *Liebert*.

The user name and password can be changed with the Web interface. See **2.2 - Change User Names and Passwords Immediately** for details.

SNMP Support

The Liebert IntelliSlot Unity card enables SNMP management of Liebert equipment. To integrate the card into a SNMP implementation, import or compile the Liebert Global Products MIB on the network management station (NMS).

The Liebert Global Products MIB is available at Liebert's Web site (www.liebert.com); it supports both Windows® (192436P1) and Unix (192435P1) file formats.

Web Support

The Liebert IntelliSlot Unity card delivers Web management and control to Liebert equipment over HTTP and HTTPS. All authorized users on your network will be able to view status information.

Modbus TCP and Modbus RTU Support

The Liebert IntelliSlot Unity card supports Modbus TCP and Modbus RTU for the full range of information available from the managed device. The Modbus protocol mapping document, SL-28170, is available at Liebert's Web site: www.liebert.com

BACnet IP and BACnet MSTP Support

The Liebert IntelliSlot Unity card supports BACnet IP and BACnet MSTP for the full range of information available from the managed device. The BACnet protocol mapping document, SL-28170, is available at Liebert's Web site: (www.liebert.com). This document includes the BACnet Protocol Implementation Conformance Statement (PICS) document as a guide to implementing the BACnet protocol.

YDN23 Support

The Liebert IntelliSlot Unity card supports YD/T-1363 specification for the full range of information available from managed Liebert NXL™ or Liebert PeX™ units.

Trellis™ Support

The Liebert IntelliSlot Unity-DP card communicates a rich set of Emerson Protocol information to the Trellis DCIM platform.

Trellis can manage and control Liebert equipment using SNMP, Modbus or the Emerson Protocol. This allows monitoring all Liebert equipment using Liebert IntelliSlot Web, Liebert IntelliSlot 485, Liebert IntelliSlot IPBML, Liebert IntelliSlot Web ADPT or Liebert IntelliSlot Unity platform communication interfaces.

Liebert Nform® Support

Utilizing the Emerson Protocol or SNMP and Web technologies built into each Liebert IntelliSlot Unity card, Liebert Nform will centrally manage alarm notifications to provide an easy interface to access critical equipment information.

A downloadable version is available online at: nform.liebert.com

Liebert MultiLink® Support

The Liebert IntelliSlot Unity card integrates with Liebert's MultiLink software to provide unattended, graceful operating system shutdown of PCs, servers and workstations. The card can be monitored by Liebert MultiLink over the network, eliminating the need for serial cables.

For more information on Liebert MultiLink and a downloadable version of Liebert MultiLink software, visit multilink.liebert.com

1.3 Support for Liebert SN Sensors

The Liebert IntelliSlot Unity card supports connection and monitoring up to 10 Liebert SN modular and integrated sensors. Available sensor types include temperature, humidity, door closure, contact closure and leak detection. Sensor Tab menus permit configuring sensors and putting them in order for easier checking of high-priority conditions.

2.0 INSTALLATION



WARNING

Risk of improper installation. Can cause equipment damage, injury or death.

Only a qualified service professional should install these products. Emerson recommends having an Emerson Network Power® Liebert Services representative perform the installation in large UPS's. Contact Liebert Services at 1-800-LIEBERT (1-800-543-2378).

NOTICE

Risk of duplicate node ID's if two or more Liebert IntelliSlot cards are installed. Can cause network conflicts.

An internal networking conflict may occur within a device when multiple communication cards with duplicate Node IDs are installed in the device.

Each Liebert IntelliSlot card must have a unique node ID. This will not be a problem if only one card is installed on your system. Duplicate node ID's are easily averted with the procedure detailed in **2.4 - Installing Multiple Liebert IntelliSlot Unity Cards in a System**.

2.1 Installing the Liebert IntelliSlot Unity Card

The Liebert IntelliSlot Unity card may be installed at the factory or field-installed. To perform a field-installation:

1. Find the Liebert IntelliSlot bay on your Liebert equipment—It may have a plastic cover.
2. Insert the card into the Liebert IntelliSlot bay.



NOTE

The card will only fit one way in the Liebert IntelliSlot bay because the circuit board is not centered on the faceplate. The slot in the Liebert IntelliSlot bay also is not centered.


3. Secure the card with the screws supplied with the cover plate.
4. Connect an Ethernet cable to the card's Ethernet RJ-45 port for IP communication interfaces.
5. Connect a serial cable to the card's 485 RJ-45 port for RS-485 communication interfaces (see **2.1.3 - Connect an RS-485 Serial Cable**).

2.1.1 Assigning the Card's IP Address

DHCP

The Liebert IntelliSlot Unity card is factory-configured for DHCP. If a Static or BootP network configuration is required, change the Boot Mode as described in **Static IP on page 6**. Connect an RJ-45 cable to the card and it will receive an IP address from the DHCP server. Contact the DHCP administrator to obtain the IP address using the Liebert IntelliSlot Unity card's MAC address. The MAC address is printed on the card's faceplate.

If the DHCP administrator is not available or there is no way of determining the IP address assigned by the DHCP server, use a computer with a direct Ethernet connection to the Liebert IntelliSlot Unity card, and the Autoconfiguration IPv4 Address convention described in **2.1.2 - Connect an Ethernet Cable** to access the card's Web page and configure the card. To see the card's last DHCP-assigned IP address, click on the Communications Tab, then on the left side menu select **Support > Active Networking**. The table of information will show the last IP address assigned by the DHCP server. The card may retain that IP address when it reconnects to the DHCP network because most DHCP systems reuse the same IP address for the same device.

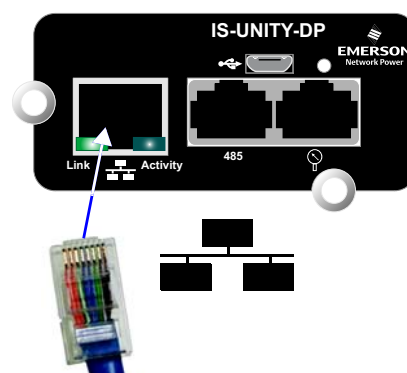

Communications Tab

Last DHCP Address

Status	Value	Units
Ethernet MAC	00:00:68:10:11:4f	
IPv4 Address	126.4.212.175	
IPv4 Default Gateway	126.4.212.1	
IPv4 Primary DNS Server	10.203.52.131	
IPv4 Secondary DNS Server	10.20.64.11	
Last DHCP/BOOTP Address		
Last DHCP Lease		0 sec
IPv6 Global Address		
IPv6 SLAAC Address		
IPv6 Link Local Address	fe80::200:68ff:fe10:114f	
IPv6 Default Gateway		
IPv6 Primary DNS Server		
IPv6 Secondary DNS Server		
Last DHCPv6 Address		
Last DHCPv6 Lease		0 sec

Support > Active Networking

Static IP

To assign a static IP address, use the Ethernet connection to configure the card. Proceed to **2.1.2 - Connect an Ethernet Cable** and **2.2 - Change User Names and Passwords Immediately**.

2.1.2 Connect an Ethernet Cable

1. Connect a computer running a Microsoft Windows operating system (Microsoft Windows® XP with SP2 [64-bit] or SP3 [32-bit] or later) to the card by plugging a network cable into the RJ-45 port on the computer and the Liebert IntelliSlot Unity card.
2. Autoconfiguration, which is normally enabled on computers running Microsoft Windows operating systems, will automatically negotiate the communication settings. This takes about one minute.



NOTE

If the computer does not automatically connect, verify that autoconfiguration is enabled by: Open the Command Prompt window from the computer's Start menu.

*Enter ipconfig /all to verify that Autoconfiguration is enabled on the computer and that an Autoconfiguration IPv4 Address has been assigned: Enabled = Yes (see **Figure 2-1**). An Autoconfiguration IPv4 Address begins with 169.254.)*

3. If the Ethernet adapter being used to attach to the card does not show an Autoconfiguration IPv4 Address, open a new Command Prompt and type `ipconfig/renew` and press Enter. This forces the computer to acquire an Autoconfiguration IPv4 Address.
4. When the computer has an Autoconfiguration IPv4 Address, open a browser window on the computer and type `169.254.24.7` (the card's default Autoconfiguration IPv4 Address) in the URL address field. The card's Web page will appear.

Figure 2-1 Command prompt access

```

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix  . : 
Description . . . . . : Intel(R) 82579LM Gigabit Network Connection
Physical Address. . . . . : E0-DB-55-E2-3F-54
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
Link-local IPv6 Address . . . . . : fe80::1dc0:2a66:a01f:f92a%11(Preferred)
Autoconfiguration IPv4 Address. . . : 169.254.249.42(Preferred)
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . : 
DHCPv6 Iaid . . . . . : 266394453
DHCPv6 Client DUID. . . . . : 00-01-00-01-18-9B-0A-82-E0-DB-55-E2-3F-54

```

2.1.3 Connect an RS-485 Serial Cable

For Building Management Systems using serial network connections, an RS-485 serial cable connection will be used.

Liebert IntelliSlot Unity cards come with an Adapter RJ-45-2POS Terminal Block. The adapter has two screw terminals to attach the ends of a RS-485 cable for communicating to a building management system.


1. Find the serial cable from the building management system. If it already has an RJ-45 connector on the end, determine whether it uses the same pinout as the Liebert IntelliSlot Unity card's connector. If the pinout is the same as the Liebert IntelliSlot Unity card connector's pinout, skip to **Step 7**.
2. Strip the ends of the positive (typically red) and negative (typically black) leads on the RS-485 cable so that enough bare wire is exposed for connection, about 1/4" (6mm).



NOTE

No bare wire should be exposed when the connection is completed.

3. Position the adapter so the side with the positive and negative marks is face up. The small markings are on the same side as the screw heads, as shown at right.
4. Loosen the screw to the positive terminal and insert the red wire far enough to insert the bare wires into the terminal block under the screw, then tighten the screw.
5. Be careful not to break the wires.
6. Repeat **Step 3** with the negative terminal and the black wire.
7. Plug the cable into the 485 RJ-45 port on the Liebert IntelliSlot Unity card.

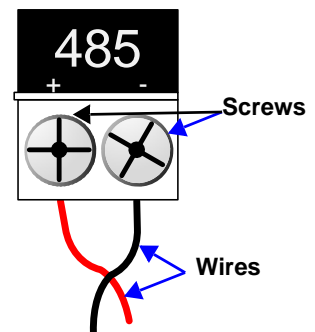

2.2 Change User Names and Passwords Immediately

Emerson recommends changing the administrative user name and password **immediately** to safeguard protected configuration and control areas of the Liebert IntelliSlot Unity card.

The user name and password are set at the factory; each is *Liebert* (case-sensitive). All printable characters are valid except \ : ' < > ~ ? " #

A general user name and password are also set at the factory: *User* and *User* (case-sensitive). This may be left at the factory default or changed. The general user has access only to non-protected configuration and control areas of the Liebert IntelliSlot Unity card.

To change the default user names:

1. Select the Communications Tab > Configuration > User.
2. Click the **Edit** button and enter the factory-set administrator user name (*Liebert*) and password (*Liebert*).
3. Click **OK**.
4. Enter a new administrator user name and password.
5. Re-enter the administrator password to confirm it.
6. **Optional General User Name Change**
7. Enter a new general user name and password.
8. Re-enter the general user's password to confirm it.
9. Click the **Save** button to confirm the changes or click **Cancel** to discard them.



NOTE

Record the new user names and passwords and save them in a secure place where they can be found if forgotten.

A lost password cannot be retrieved. If the password is lost, the card must be reset to factory defaults and reconfigured.

Figure 2-2 Change administrator and general user names and passwords

Settings	Edit	Save	Cancel	Units
Administrator Username	Liebert			
Administrator Password	*****			
Reenter Administrator Password	*****			
General User Username	User			
General User Password	****			
Reenter General User Password	****			

Administrator User Name and Password

General User Name and Password


2.3 Configure the Card

The Liebert IntelliSlot Unity card requires minor configuration, such as choosing the IP/Web communication interface, serial RS-485 communication interface, or both. The default for IP/Web communication is IPv4, but this can be changed to IPv6 for greater security; contact your network administrator to determine whether it is compatible with your network. To choose the communication interface refer to **Figure 2-3**:

1. Select Communications Tab > Configuration > Network.

2. Enable the protocol, either IPv4 or IPv6, that will be used to communicate with the Liebert IntelliSlot Unity card and with the Liebert equipment.
 - a. Click on either IPv4 or IPv6.
 - b. Click the **Edit** button.
 - c. When prompted with a login display, enter the user name and password (the defaults are *Liebert* and *Liebert*).
 - d. Put a check mark (✓) in the **enabled** box.
 - e. Insert the desired or assigned IP address along with the rest of the required networking information; contact your system administrator if necessary.
3. Click on **Save** to confirm the changes or click on **Cancel** to discard them. The changes will take effect after the card is restarted.

Figure 2-3 Enabling the communication protocol—IPv4 or IPv6

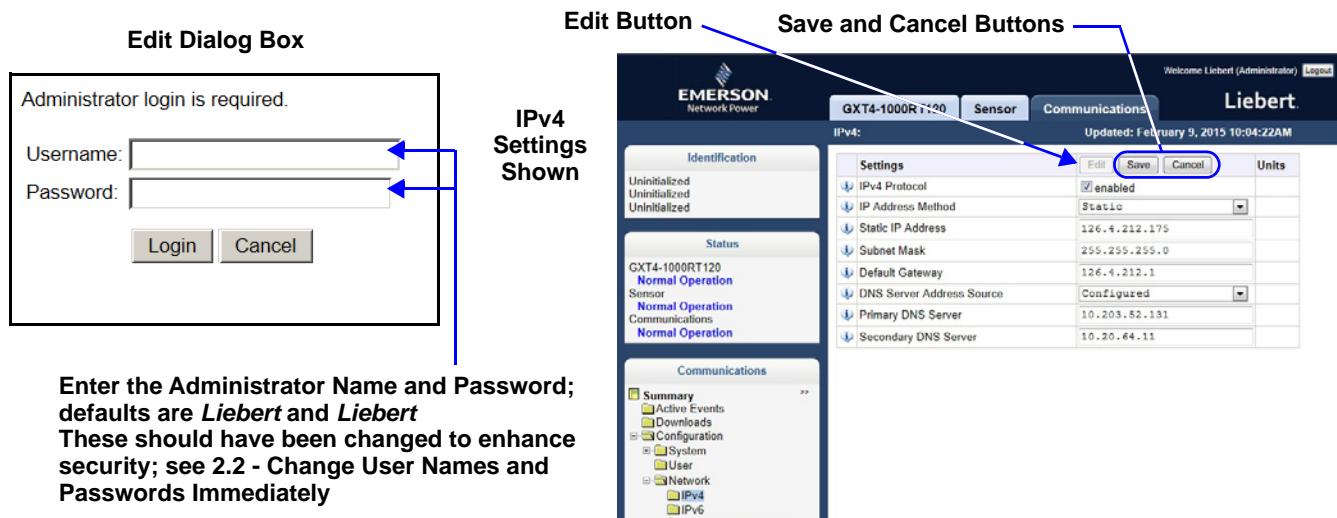

2.4 Installing Multiple Liebert IntelliSlot Unity Cards in a System

More than one Liebert IntelliSlot card may be installed in a system, but circular routes and duplicate node ID's must be avoided during installation. The instructions below apply if the second card to be installed is a Liebert IntelliSlot Unity card. If the second card is not a Liebert IntelliSlot Unity card, follow instructions in the user manual for that card.

Before beginning installation of a second Liebert IntelliSlot card, verify that the first card functions properly.

If the first card is a Liebert IntelliSlot card, but not a Liebert IntelliSlot Unity card, and if both cards connect to the same Ethernet network, then you should disable the router function on the first card. This will avoid circular routes. Follow instructions in the user manual for the first card.

If the first and second cards are both Liebert IntelliSlot Unity cards, steps must be taken to avoid duplicate Emerson Protocol MSTP node ID's. By default, the two cards would use the same node ID, and one or both cards would report a duplicate node error and fail to communicate with the system.

The default node ID for a Liebert IntelliSlot Unity card is 0, so the second card should use 1 or 2 preferably, or 127 if necessary. Contact your system administrator about the proper node ID for the second card, then perform the steps below.

1. Open a Web browser and navigate to the second Liebert IntelliSlot Unity card.
2. Click on Communications Tab > Configuration > Emerson Protocol > MSTP.
3. Click on Edit and enter a password and username, if required.
4. Enter the new node ID.

5. Click Save to confirm the changes or click Cancel to discard them.
6. Restart the card as follows.
 - a. Select the Communications Tab > Support.
 - b. Click on Enable.
 - c. Click on Restart.

3.0 ENABLE COMMUNICATION PROTOCOLS

The Liebert IntelliSlot Unity card will communicate with equipment and third-party systems over these protocols:

- BACnet IP
- BACnet MSTP
- Modbus TCP
- Modbus RTU
- SNMP
- YDN23



NOTE

No more than two protocols may be enabled on one card.

- *Only one version of BACnet may be selected, either BACnet IP or BACnet MSTP*
- *Only one version of Modbus may be selected, either Modbus TCP or Modbus RTU*
- *Only one of the protocols can use the 485 port; choosing two 485 protocols will cause conflicts.*



NOTE

Some Building Management Systems can be configured to send continuous updates for device setpoints, usually setting the same value. The BMS should be configured to send, on a sustained average, no more than two writes per second to the device. This will allow the device to catch up after a burst of updates when required while allowing other communication with the device to proceed.

3.1 Enable Protocols


Protocols may be enabled after a card has been installed and configured. After a protocol is enabled, it must be configured, which requires opening that protocol's folder (Communications Tab>Protocols>(desired protocol).

To enable two communication protocols:

1. Select Communications Tab > Protocols.
2. Click on **Edit** and enter the administrator user name and password.
3. Put a check mark (✓) in the desired protocols—Only two may be enabled; only one of the two can use the 485 port.
4. Click **Save** to confirm the changes or click on **Cancel** to discard them.
5. Configure the protocols selected. For details, refer to **5.0 - Edit the Liebert IntelliSlot Unity Card Configuration**.

6. Restart the card (refer to **5.11 - Configuration—Communications Tab-Support Folder**).
 - a. Select Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-1 Enable protocols; enable commands

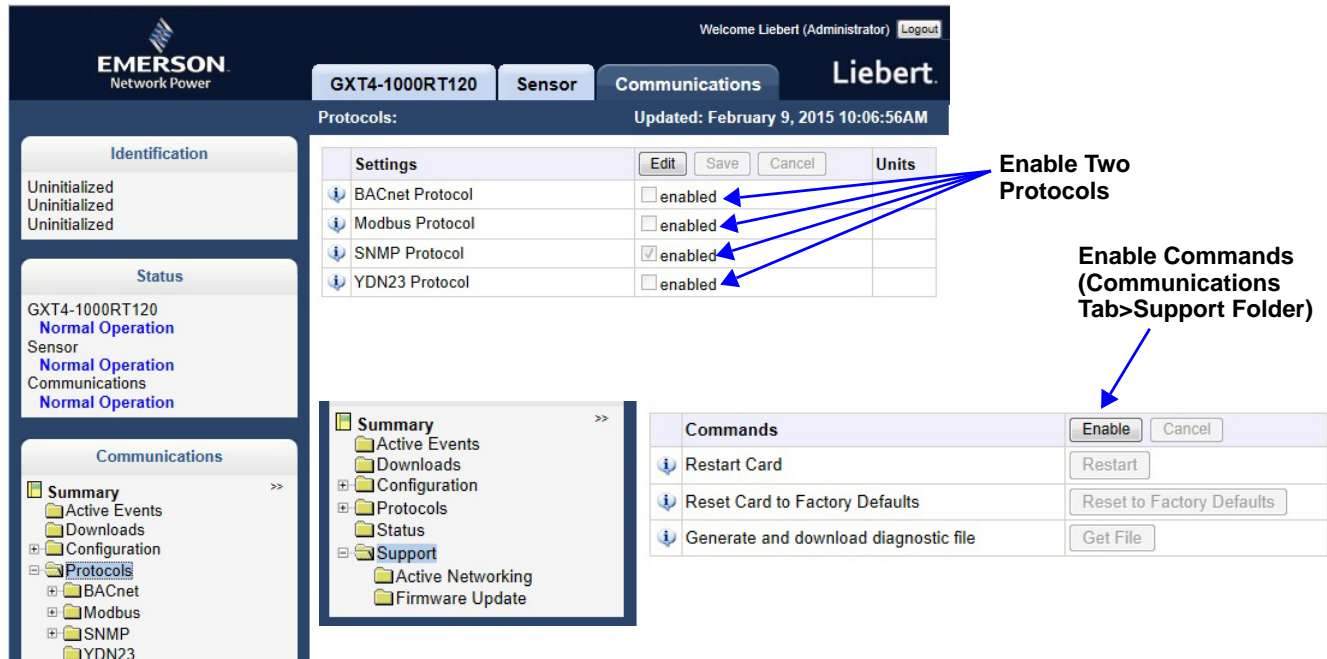

3.1.1 Enable Modbus Protocol

Protocols may be enabled after a card has been installed and configured. To enable Modbus protocol:


1. Select Communications Tab > Protocols > Modbus.
2. Click on **Edit** and enter a User name and password.
3. Select the access level (Read Only or Read/Write).
4. Select the Modbus interface, (Modbus TCP or Modbus RTU).
5. Click **Save** to confirm the changes or click on **Cancel** to discard the changes.
6. Configure the Modbus interface chosen; refer to **Configure Modbus TCP** or **Configure Modbus RTU**. For additional details, see **5.7 - Protocols Folder—Modbus**.

3.1.1.1 Configure Modbus TCP

1. Select the Communications Tab > Protocols > Modbus TCP.
2. Click on **Edit** and enter a User name and password if required.
3. Set the Limit Network Access Type by choosing from the drop-down list (Open/Same Subnet/Trusted IP List). Refer to **5.7 - Protocols Folder—Modbus** for additional details.
4. Enter the port to be used by the Modbus Server to listen for and respond to Modbus protocol requests based on limit Network Access Type setting.
5. Enter the Maximum Client Connection Count.

6. Click **Save** to confirm the changes or click on **Cancel** to discard them.
7. Restart the card to confirm the changes.
 - a. Select Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-2 Modbus TCP-Trusted IP List

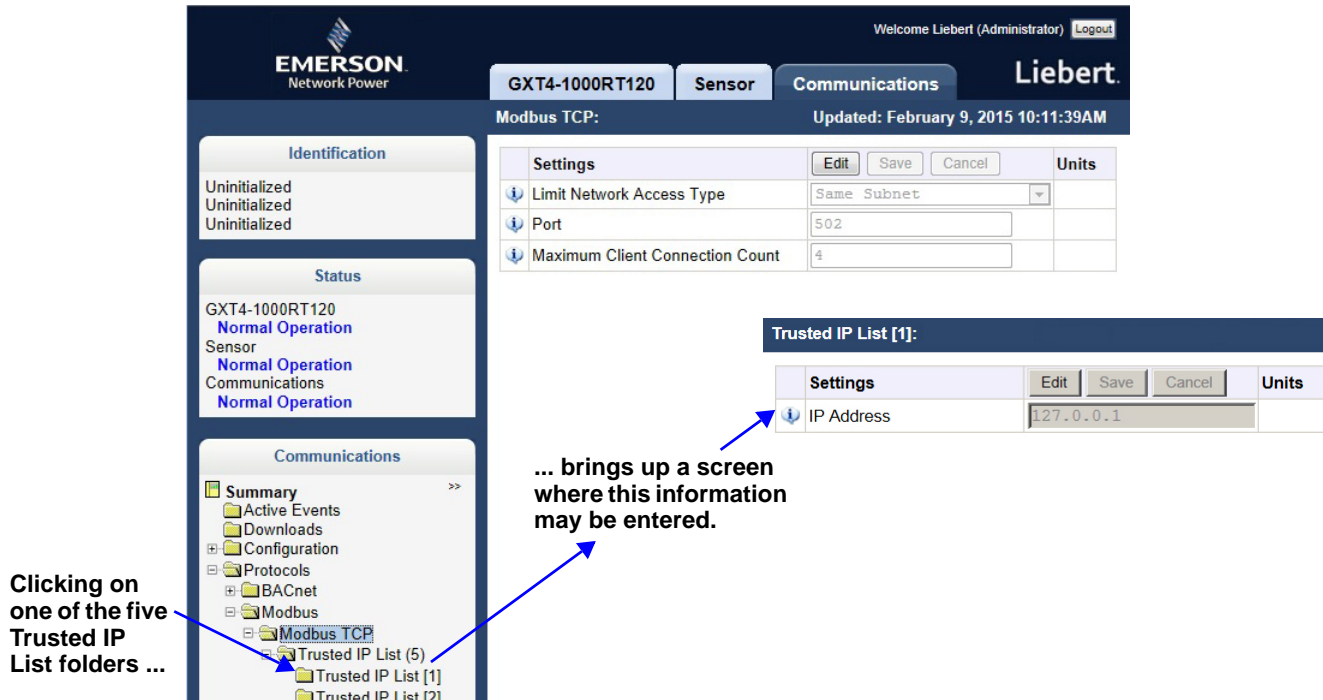

3.1.1.2 Configure Modbus RTU

1. Select the Communications Tab > Protocols > Modbus RTU.
2. Click on **Edit** and enter a user name and password if required.
3. Set the Node ID and the Baud Rate.
4. The Node ID defaults to 1, but must have a value from 1 to 255 that is unique among devices connected through the RS-485 interface.
5. The default baud rate is 9600; 19200 and 38400 also available.
6. Contact your system administrator if you are uncertain about the settings.

7. Click **Save** to confirm the changes or click on **Cancel** to discard them.
8. Restart the card to confirm the changes.
 - a. Select Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-3 Modbus-RS-485

The screenshot displays the Emerson Liebert GXT4-1000RT120 Sensor Communications settings page. The top navigation bar includes the Emerson logo, the device model 'GXT4-1000RT120', the 'Sensor' tab, and the 'Communications' tab. The page title is 'Modbus RTU: Updated: February 9, 2015 10:14:46AM'. The left sidebar shows the navigation menu with 'Modbus RTU' selected under 'Protocols'. The main content area shows the 'Settings' table with the following data:

Settings	Edit	Save	Cancel	Units
Node ID	1			
Data Rate	9600			
Parity Check	None			

A blue arrow points to the 'Node ID' field, which contains the value 1. A text box on the right states: 'Node ID must be unique on the RS-485 bus this card is connected to.'

3.1.2 Enable BACnet Protocol

Contact your system administrator or building management system administrator if you are uncertain about the settings.

1. Select Communications Tab > Protocols > BACnet.
2. Click on **Edit** and enter a user name and password if required.
3. Enter the Managed Device Write Access level (Read Only or Read/Write). This determines a user's ability to change settings in the Liebert IntelliSlot Unity card.
4. Choose the BACnet interface, either BACnet IP or BACnet MSTP
5. Set the Device Object Instance Number.
6. Set the Device Object Name.
7. Set the APDU Timeout.
8. Set the APDU Retries.

9. Click **Save** to confirm the changes or click on **Cancel** to discard them.
10. Configure the BACnet interface chosen; refer to **Configure BACnet IP Protocol** or **Configure BACnet MSTP Protocol**. For additional details, see **5.6 - Protocols Folder—BACnet Folder**.

Figure 3-4 BACnet protocol settings

The screenshot displays the Liebert web interface for the GXT4-1000RT120 unit. The top navigation bar includes the Emerson Network Power logo, the unit name 'GXT4-1000RT120', the 'Sensor' tab, and the 'Communications' tab. The 'Status' section shows 'Normal Operation' for the unit, sensor, and communications. The 'Communications' section shows a tree view with 'BACnet' selected. The 'BACnet' settings table is as follows:

Settings	Edit	Save	Cancel	Units
Managed Device Write Access	Read Only			
BACnet Interface	BACnet IP			
Device Object Instance Number	1130000			
Device Object Name	Device1130000			
APDU Timeout	3000			
APDU Retries	3			

3.1.2.1 Configure BACnet IP Protocol

Contact your system administrator if you are uncertain about the settings.

1. Select Communications Tab > Protocols > BACnet IP.
2. Click on **Edit** and enter a User name and password if required.
3. Set the BACnetIP/Port Number
4. If the Liebert IntelliSlot Unity card is on a different subnet, a possibility when the monitored units are part of a Liebert SiteScan network or other third-party monitoring service:
 - a. Choose whether to enable Register as Foreign Device.
 - b. Enter the IP address of the BBMD (BACnet Broadcast Management Device).
 - c. Enter a time in seconds for Foreign Device Time-to-Live.
5. Click **Save** to confirm the changes or click on **Cancel** to discard them.

6. Restart the card to activate the changes.
 - a. Select the Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-5 BACnet IP

The screenshot shows the Emerson Network Power Liebert GXT4-1000RT120 web interface. The top navigation bar includes 'GXT4-1000RT120', 'Sensor', and 'Communications' tabs. The 'Communications' tab is active, showing 'BACnet IP' settings. The left sidebar contains 'Identification', 'Status', and 'Communications' sections. The 'Status' section shows 'Normal Operation' for Sensor, Communications, and BACnet IP. The 'Communications' section shows a tree view with 'BACnet IP' selected. The main content area displays the 'BACnet IP' settings table.

Settings	Edit	Save	Cancel	Units
BACnet IP Port Number				
Register as Foreign Device				
IP Address of BBMD				
Foreign Device Time-to-Live				sec

3.1.2.2 Configure BACnet MSTP Protocol

Contact your system administrator if you are uncertain about the settings.

1. Select Communications Tab > **Protocols** > **BACnet MSTP**.
2. Click on **Edit** and enter a user name and password if required.
3. Set the BACnet MSTP Node ID. The ID default is 1.
4. Set the BACnet MSTP Data Rate.
5. Set the BACnet MSTP Max Master Address.
6. Set the BACnet MSTP Max Info Frames. The default is 8.

7. Click **Save** to confirm the changes or click on **Cancel** to discard them.
8. Restart the card to activate the changes.
 - a. Select Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-6 BACnet MSTP

The screenshot displays the Emerson Network Power Liebert GXT4-1000RT120 Sensor Communications configuration page. The page is titled 'BACnet MSTP' and shows the current status as 'Normal Operation'. The left sidebar contains a navigation menu with 'Summary', 'Active Events', 'Downloads', 'Configuration', 'Protocols', 'BACnet', 'BACnet IP', and 'BACnet MSTP'. The main content area shows the 'Settings' table for BACnet MSTP.

Settings	Edit	Save	Cancel	Units
Node ID	1			
Data Rate	38400			
Max Master Address	127			
Max Info Frames	8			

3.1.3 Enable SNMP

SNMPv1/v2c and SNMPv3 are enabled by default. The protocols may be configured or their default values may be accepted. Authentication Traps are not enabled by default. The default Heartbeat Trap interval is 24 hours; this can be disabled or the interval may be changed.

1. Select the Communications Tab > Protocols > SNMP.
2. Click on **Edit** and enter a User name and password if required.
3. To enable Authentication Traps, put a check mark (☑) in the box.
4. To change the Heartbeat Trap Interval, choose a time from the drop-down list or choose Disabled to prevent any heartbeat traps from being sent.
5. The interval times offered are 5 minutes, 30 minutes, or 1, 4, 8, 12 or 24 hours.
6. Choose whether to disable the traps or to set the interval to one of the periods on the menu.

7. Click **Save** to confirm the changes or click on **Cancel** to discard them.
8. Restart the card to activate the changes.
 - a. Select the Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-7 SNMP

The screenshot shows the Liebert GXT4-1000RT120 web interface. The top navigation bar includes the Emerson logo, the device name 'GXT4-1000RT120', and tabs for 'Sensor' and 'Communications'. The 'Communications' tab is selected. On the left, a sidebar shows a tree view of configuration options, with 'SNMP' expanded. The main content area displays the 'SNMPv3 User (20)' settings table.

Status	Value	Units
SNMPv3 Engine ID	800001DC0300006810114F	

Settings	Edit	Save	Cancel	Units
SNMPv1/v2c Enable	<input checked="" type="checkbox"/>	enabled		
SNMPv3 Enable	<input checked="" type="checkbox"/>	enabled		
Authentication Traps	<input type="checkbox"/>	enabled		
Heartbeat Trap Interval		24 hours		
RFC-1628 MIB	<input checked="" type="checkbox"/>	enabled		
RFC-1628 MIB Traps	<input checked="" type="checkbox"/>	enabled		
Liebert Global Products (LGP) MIB	<input checked="" type="checkbox"/>	enabled		
LGP MIB Traps	<input checked="" type="checkbox"/>	enabled		
LGP MIB System Notify Trap	<input checked="" type="checkbox"/>	enabled		

3.1.3.1 Configure SNMP Settings

SNMPv3 Users or SNMPv1/v2c Trap and Access settings must be made before SNMP access or notifications can occur. The Liebert IntelliSlot Unity card permits up to 20 SNMPv3 Users, up to 20 SNMPv1 Trap targets, and up to 20 SNMPv1/v2c Access addresses.

The required changes vary according to the type of SNMP protocol used. For SNMPv1, trap settings must be made. SNMPv2c must have Access settings made. SMPv3 users must have settings configured. SNMPv1 trap settings are separate from the access settings for SNMPv1/v2c.

3.1.3.2 Configure SNMPv3

The settings must be made for each user who will receive notifications.

1. Select Communications Tab > Protocols > SNMP > SNMPv3 Users Setting (20) > SNMPv3 Users Setting (1).
2. Click on **Edit** and enter a User name and password if required.
3. Enter the information and set the permissions appropriate to the user. Refer to **Figure 3-8** for the information required.
4. Click **Save** to confirm the changes or click on **Cancel** to discard them.

5. Repeat **Steps 1** through **4** for any additional users.
6. Restart the card to activate the changes.
 - a. Select the Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-8 SNMPv3 user settings

The screenshot shows the Liebert GXT4-1000RT120 web interface. The top navigation bar includes the Emerson Network Power logo, the device name 'GXT4-1000RT120', the 'Sensor' tab, the 'Communications' tab, and the user 'Liebert'. The main content area is titled 'SNMPv3 User [1]' and shows a table of settings. A blue box highlights the settings table, and a callout points to it with the text 'Settings are required for each user'.

Settings	Edit	Save	Cancel	Units
SNMPv3 User Enable	<input type="checkbox"/>	enabled		
SNMPv3 Username				
SNMPv3 Access Type		Read Only		
SNMPv3 Authentication		None		
SNMPv3 Authentication Secret				
SNMPv3 Privacy		None		
SNMPv3 Privacy Secret				
SNMPv3 Trap Targets				
SNMPv3 Trap Port		162		

3.1.3.3 Configure SNMPv1 Trap Settings

1. Select Communications Tab > Protocols > SNMP > SNMPv1 Trap (20).
2. Click on **Edit** and enter a User name and password if required.
3. Enter the information and set the permissions appropriate to the user. Refer to **Figure 3-9** for the information required.
4. Click **Save** to confirm the changes or click on **Cancel** to discard them.

5. Repeat **Steps 1** through **4** for any additional users.
6. Restart the card to confirm the changes.
 - a. Select the Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-9 SNMPv1 trap settings

The screenshot displays the web interface for the Emerson Network Power Liebert GXT4-1000RT120. The top navigation bar shows the 'Communications' tab selected. The left sidebar contains a tree view under 'Communications' with 'SNMPv1 Trap [1]' selected. The main content area shows the configuration for this trap. A table with the following settings is highlighted by a blue circle:

Settings	Edit	Save	Cancel	Units
SNMP Trap Target				
SNMP Trap Port		162		
SNMP Trap Community String				


A callout box points to the highlighted settings table with the text: "Settings required for each address that will receive SNMP notifications."

3.1.3.4 Configure SNMPv1/v2c Access Settings

1. Select Communications Tab > Protocols > SNMP > SNMPv1/v2c Access (20) > SNMPv1/v2c Access (1).
2. Click on **Edit** and enter a User name and password if required.
3. Enter the information and set the permissions appropriate to the user. Refer to **Figure 3-9** for the information required.

4. Click **Save** to confirm the changes or click on **Cancel** to discard them.
5. Restart the card to confirm the changes—The card must be restarted before another user's settings may be changed.
 - a. Select the Communications Tab > Support.
 - b. Enable the commands.
 - c. Click on **Restart**.

Figure 3-10 SNMPv1/v2c Access settings

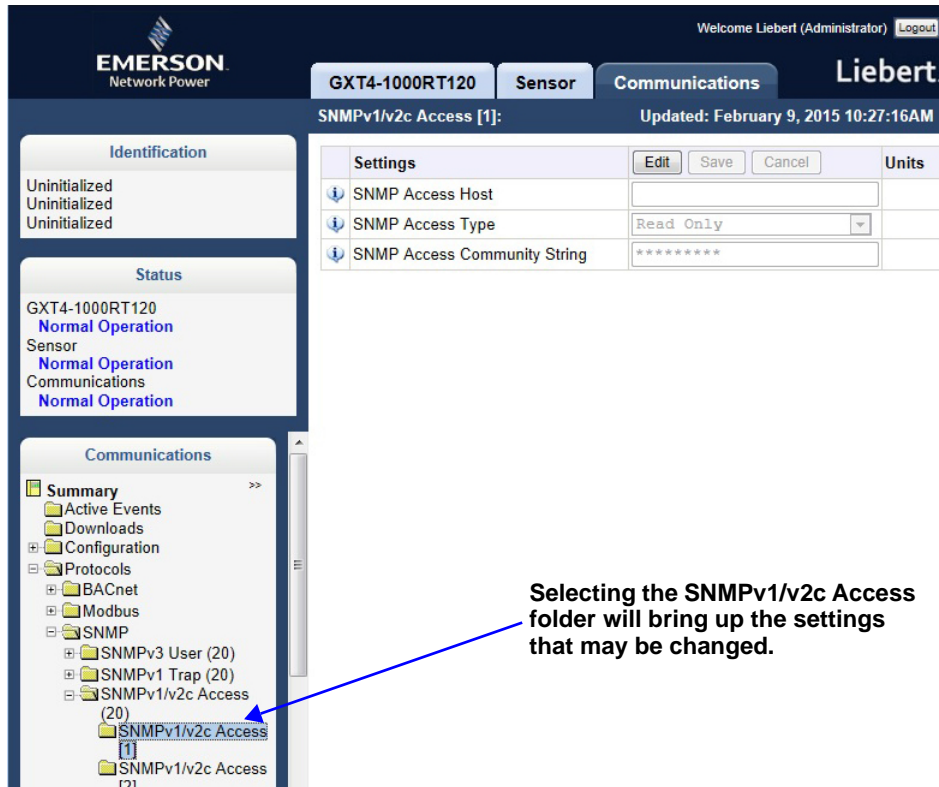

Selecting the SNMPv1/v2c Access folder will bring up the settings that may be changed.

3.2 Download Protocol Mappings

The Liebert IntelliSlot Unity Card's permits downloading files listing information available from a managed device for each enabled protocol. The listings identify the data available from the device and how that data will be represented, or mapped, into a particular protocol.

To download a data mapping list, click on the Managed Device tab, then **Summary > Downloads**. The **Data Mapping Files** heading will show mapping files for each enabled protocol:

- *BACnetDataMap.txt* for BACnet IP and BACnet MSTP
- *ModbusDataMap.txt* for Modbus TCP and Modbus RTU
- *SNMP_Events.txt*, *SNMP_Parameters.txt*, *SNMP_upsMibEvents.txt*, and *SNMP_upsParams.txt* for SNMP v1/v2c/v3
- *Ydn23DataMap.txt* for YDN23

More information about BACnet and Modbus protocol mapping is available in the Liebert IntelliSlot Modbus RTU, Modbus TCP, BACnet MSTP and BACnet IP Reference Guide (SL-28170) at Liebert's Web site: www.liebert.com

The SNMP MIB files are also available for download from the Web site.

4.0 LIEBERT INTELLISLOT UNITY CARD WEB PAGE LAYOUT

Default settings in the Liebert IntelliSlot Unity card permit using it immediately after installation to monitor the equipment the card is installed in. The Web interface permits customizing the information to ease monitoring the equipment and troubleshooting problems. Users can name the equipment, enter a location, set up e-mail and text alerts and change equipment settings.



NOTE

The Edit button will be grayed-out if the settings on a menu cannot be changed.

4.1 Web Page Sections

Each Web page displayed by the Liebert IntelliSlot Unity card has these main areas (see **Figure 4-1**):

- Identification
- Status
- Tab Menus
- Detail

Identification

Displays the System Name, System Location and System Description

Status

Displays the status of the monitored equipment, the Liebert IntelliSlot Unity card and any Liebert SN sensors connected to the card.

Tab Menus

The Liebert IntelliSlot Unity card has two tabs by default: the Managed Device Tab, which will display the name of the monitored equipment, and the Communications Tab. A third tab, the Sensor Tab, appears if Liebert SN sensors have been installed. The tab selected determines the menu shown.

- **Managed Device Tab**—Information pertaining to the equipment being monitored and controlled. Refer to **4.3 - Managed Device Tab Menus** for details. The tab label refers to the type of Liebert unit the card is installed in. For example, the Managed Device Tab for a card installed in a Liebert GXT4-1000-RT120 UPS will be labeled GXT4-1000-RT120 (see **Figure 4-1** for this example). **Figure 4-2** shows a Web page for a Liebert IntelliSlot Unity card installed in a Liebert CRV.
- **Communications Tab**—Information about the Liebert IntelliSlot Unity card, such as the overall event status of the equipment and communication interface, logs of third-party information, communication settings, third-party protocol settings and system status. Refer to **4.4 - Communications Tab Menus** for details.
- **Sensor Tab**—Information about Liebert SN sensors, if any are installed, including status or data from each sensor and sensor configuration settings. When sensors are connected to the card, this tab appears between the Managed Device Tab and the Communications Tab. The tab is not shown when no sensors are connected to the card (see **Figure 4-3**). Refer to **4.5 - Sensor Tab Menus—Shown Only if a Sensor is Connected** for details.

Detail

Displays detailed information about the device based on the menu selection made in the Tab Menu area. Edits to the device and its configuration are made in this section.

Figure 4-1 Web page sections, UPS example

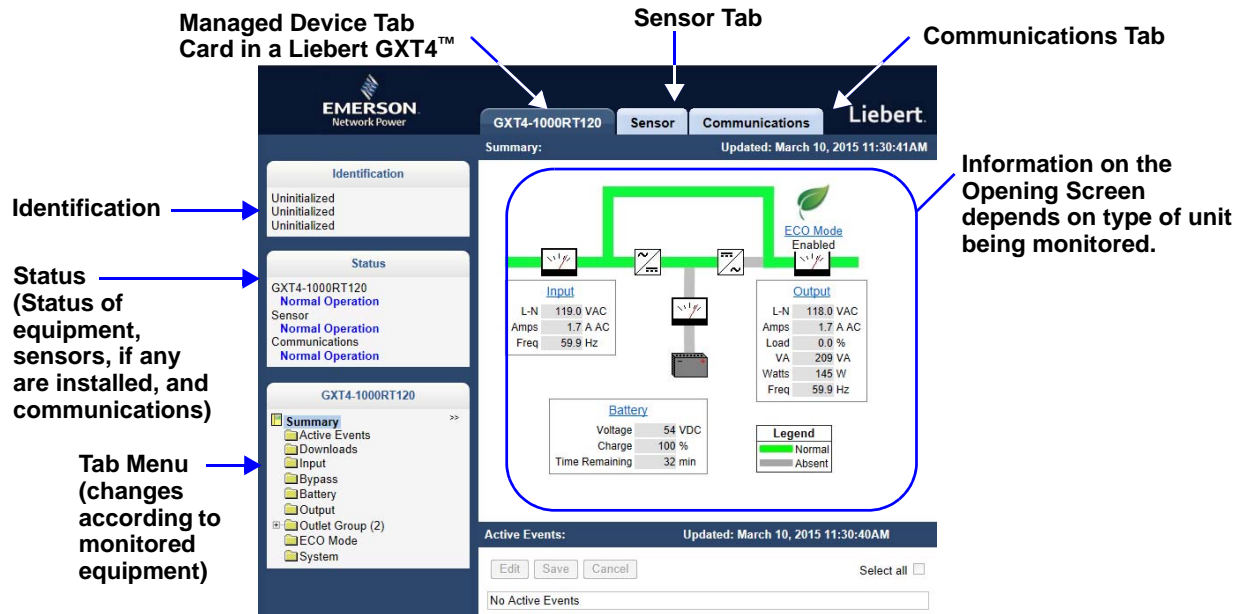


Figure 4-2 Web page sections, Thermal Management unit example


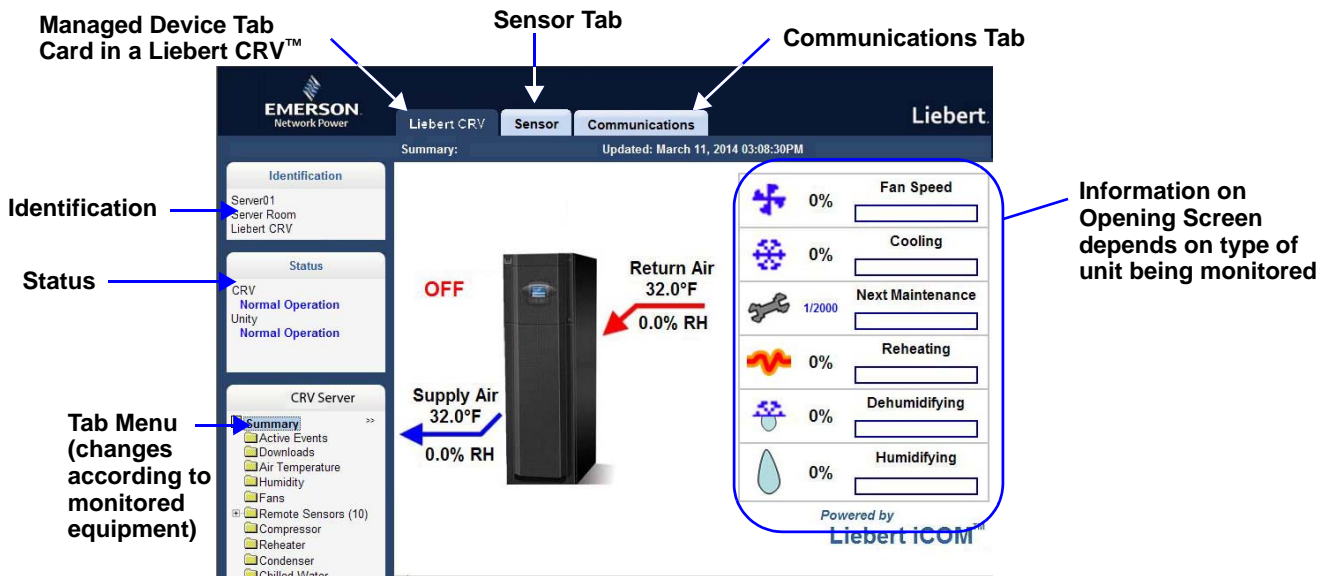


Figure 4-3 Managed Device Web page without sensors

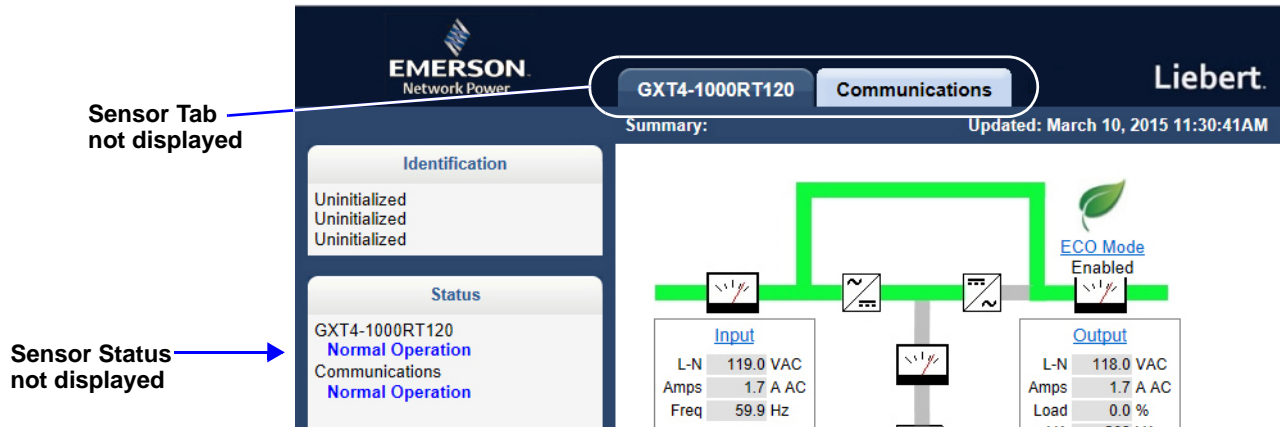

4.2 Help Text

Each Web page shown by the Liebert IntelliSlot Unity-DP card has informational text that is revealed by hovering a mouse pointer over the icon to the left of the Status, Events or Settings row, as shown below. The Web page may display any of six icons beside the Status, Events or Setting entry:

Table 4-1 Help text and icons

Icon	Description
	a check mark (?) on a green button (Event Normal)
	an i on a blue button (Event Information)
	an x on a red button (Event Alarm)
	an exclamation point (!) on a yellow shield (Event Warning)
	an exclamation point (!) on a red button (Event Critical)
	an i in a word balloon (Tool Tip).

Figure 4-4 Help text on mouse-over

EMERSON
Network Power

Uninitialized
Uninitialized
Uninitialized

Status

GXT4-1000RT120
Normal Operation
Sensor
Normal Operation
Communications
Normal Operation

GXT4-1000RT120

Summary
Active Events
Downloads
Input

Input

Updated: February 9, 2015 10:36:03AM

Status	Value	Units
System Input RMS A-N	119.0	VAC
System Input RMS Current Phase A	1.4	A AC
System Input Frequency	59.9	Hz
System Input Max Voltage A-N	121.0	VAC
System Input Min Voltage A-N	118.0	VAC
System Input Nominal Voltage	120	VAC
System Input Nominal Current	8	A AC
System Input Nominal Frequency	60	Hz

Events

	Status	Ack
Input Undervoltage	Normal	<input type="checkbox"/>
Input Overvoltage	Normal	<input type="checkbox"/>

Hovering a mouse pointer over the icon reveals information about that entry.

Help text about the System Input Nominal Frequency entry on the Managed Device Tab, Input Menu.

4.3 Managed Device Tab Menus

Menus on the Managed Device Tab list only data that is relevant to the equipment being monitored. For example, menus shown by a Liebert IntelliSlot Unity card installed in a UPS differ from menus shown by a card installed in Thermal Management equipment. Information on those menus will also differ depending on the equipment the card is installed in.

Figure 4-5 Managed Device Tab examples, Liebert GXT4™ and Liebert CRV™

The Managed Device Tab will display Status or Events for the applicable equipment only. Power information is shown in this Managed Device Tab for a UPS.

The Managed Device Tab will display Status, Events or Settings for the applicable equipment only. Environmental information is shown in this Managed Device Tab for Thermal Management equipment.

Figure 4-5 Managed Device Tab examples, Liebert GXT4™ and Liebert CRV™

Example 1: Liebert GXT4-1000RT120 (UPS)

Identification: Uninitialized, Uninitialized, Uninitialized

Status: GXT4-1000RT120, Normal Operation, Sensor, Normal Operation, Communications, Normal Operation

Summary: Active Events, Downloads, Input, Bypass, Battery, Output, Outlet Group (2), EcoMode, System

Input: Updated: February 9, 2015 10:38:29AM

Status	Value	Units
System Input RMS A-N	119.0	VAC
System Input RMS Current Phase A	1.4	A AC
System Input Frequency	59.9	Hz
System Input Max Voltage A-N	121.0	VAC
System Input Min Voltage A-N	118.0	VAC
System Input Nominal Voltage	120	VAC
System Input Nominal Current	8	A AC
System Input Nominal Frequency	60	Hz

Events:

Events	Status	Ack
Input Undervoltage	Normal	<input type="checkbox"/>
Input Overvoltage	Normal	<input type="checkbox"/>

Example 2: Liebert CRV (Thermal Management)

Identification: Unity, Unity Communications C...

Status: Liebert CRV, Normal Operation, Sensor, Normal Operation, Communications, Normal Operation

Summary: Active Events, Downloads, Air Temperature, Humidity, Fans, Remote Sensors (10), Compressor, Reheater, Condenser, Chilled Water, System Info, System Operations, Event Configuration, System Events, Asset Management, Time

Supported Status:

Supported Status	Value	Units
Supply Humidity	71.5	% RH
Return Humidity	41.0	% RH

Supported Events:

Supported Events	Status	Ack
High Return Humidity	Normal	<input type="checkbox"/>
Low Return Humidity	Normal	<input type="checkbox"/>
Humidifier Hours Exceeded	Normal	<input type="checkbox"/>
Dehumidifier Hours Exceeded	Normal	<input type="checkbox"/>
Humidifier Under Current	Normal	<input type="checkbox"/>
Humidifier Over Current	Normal	<input type="checkbox"/>
Humidifier Low Water	Normal	<input type="checkbox"/>
Humidifier Cylinder Worn	Normal	<input type="checkbox"/>
Humidifier Issue	Normal	<input type="checkbox"/>
Ext Humidifier Lockout	Normal	<input type="checkbox"/>
Humidifier Control Board Not Detected	Normal	<input type="checkbox"/>
Return Humidity Out Of Proportional Band	Normal	<input type="checkbox"/>
Dehumidifier Disabled	Normal	<input type="checkbox"/>
Dehumidifier 12 Hour Lock Out	Normal	<input type="checkbox"/>
Dehumidifier Enabled	Normal	<input type="checkbox"/>
Humidifier Disabled	Normal	<input type="checkbox"/>
Humidifier Enabled	Normal	<input type="checkbox"/>

Supported Settings:

Supported Settings	Value	Units
Humidity Set Point	45	% RH
Humidification Proportional Band	5	% RH
Dehumidification Proportional Band	5	% RH
Humidity Dead Band	5.0	% RH
High Return Humidity Threshold	60.0	% RH
Low Return Humidity Threshold	15.0	% RH

4.4 Communications Tab Menus

The Communications Tab shows the overall event status of the equipment and communication interface. It contains logs of third party information, communications settings, third party protocol settings and system status information as detailed below.

Table 4-2 Communications Tab menus

Communications Tab Menus	Description	See Details:
Active Events	Displays the current event activity	page 33
Downloads Agent (or Unity Card) Logs Event Logs Data Logs Other files	Downloading files to text-accessible, comma-delimited or tab-delimited files ease troubleshooting.	page 33
Configuration System User Network Web Server LIFE Emerson Protocol Messaging	Displays information about the system setup, access, network connections, Emerson Protocol settings and whether e-mail and SMS messaging are enabled	page 33
Protocols Modbus BACnet SNMP YDN23	Lists information and settings related to available third-party protocols employed to monitor equipment.	page 41
Status System Status System Restart Required LIFE™ device identity changed-LIFE™ needs to be reconfigured RS-485 Port Conflict Duplicate Emerson Protocol MSTP Node ID Duplicate BACnet MSTP Node ID	Shows the overall condition of the system and whether a restart is needed to activate configuration changes; restart is performed only from the Support Folder	page 51
Support Agent time and Date Agent Model Agent App Firmware Version Agent App Firmware Label Agent Boot Firmware Version Agent Boot Firmware Label Agent Serial Number Agent Manufacture Date Agent Hardware Version GDD Version FDM Version Product Sequence ID Restart Card Reset Card to Factory Defaults (see Note below) Generate and download diagnostic file Firmware Update Active Networking	Shows information needed for maintenance or troubleshooting and shortcuts to reboot the card, reset the Liebert IntelliSlot Unity card to its factory defaults and to update the card's firmware.	page 51 (Firmware Update also on page 55)



NOTE

The card may be reset to factory defaults manually by briefly pressing the reset button five times within 10 seconds.

Do not hold the reset button too long: Pressing the reset button and holding it for 5 seconds will restart the card without resetting it to factory defaults.

*To perform either function, insert a straight, non-conductive tool into the small hole on the front of the card (see **Figure 1-1** for the Reset Button's location).*

4.5 Sensor Tab Menus—Shown Only if a Sensor is Connected

When Liebert SN sensors are installed and connected to the sensor port on the Liebert IntelliSlot Unity card, the Sensor Tab appears. It contains folders showing an overview of the installed sensors, the event status of the sensors, download links for log files and sensor configuration settings as detailed below.

Figure 4-6 Sensor Tab menu

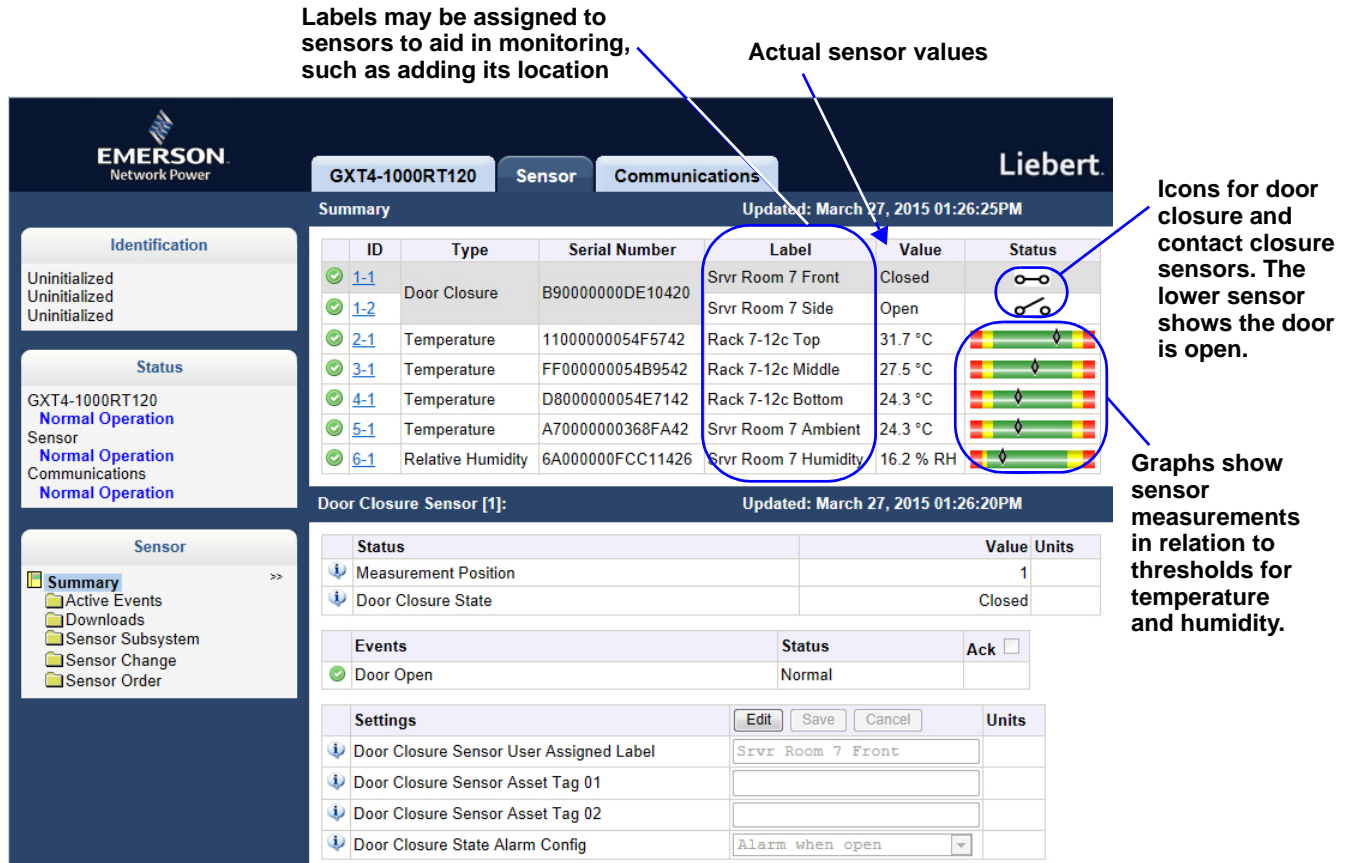


Table 4-3 Sensor Tab folders

Sensor Tab Menus	Description
Summary	Displays a list of currently discovered sensors, with their status and values. Also displays a detail section about the sensor that is currently selected
Active Events	Displays a list of sensor events that are currently active.
Downloads	Displays a list of text files that can be downloaded. The files available are dependent on the current state of the card.
Sensor Server <ul style="list-style-type: none"> System Model Number System Status Too Many Sensors Slots Not Available Acknowledge Sensor Changes 	Displays overall information about the sensors.
Sensor Change	Lists events showing sensors that have been added or removed. If the list has any entries, an Acknowledge button appears. Clicking the Acknowledge button clears the list. The Acknowledge button on this page has the same behavior as the Acknowledge button on the Sensor Server page.
Sensor Order	Displays a list of sensors, and allows setting the order in which the sensors are displayed on the Summary page.

4.5.1 Sensor Tab Summary Page

The Sensor Tab Summary Page shows the status of all installed sensors, details about any selected sensor and a Setting pane that permits changing a sensor's label, thresholds if applicable, alarm configuration and acknowledging alarms and events.

Selecting a sensor permits changing its settings at the lower part of the window.

Events may also be acknowledged on this window.

Figure 4-7 Sensor Tab-Summary page layout

EMERSON Network Power **Liebert**

GXT4-1000RT120 **Sensor** **Communications**

Summary Updated: March 27, 2015 01:26:25PM

ID	Type	Serial Number	Label	Value	Status
1-1	Door Closure	B90000000DE10420	Svr Room 7 Front	Closed	
1-2	Door Closure	B90000000DE10420	Svr Room 7 Side	Open	
2-1	Temperature	11000000054F5742	Rack 7-12c Top	31.7 °C	
3-1	Temperature	FF000000054B9542	Rack 7-12c Middle	27.5 °C	
4-1	Temperature	D8000000054E7142	Rack 7-12c Bottom	24.3 °C	
5-1	Temperature	A70000000368FA42	Svr Room 7 Ambient	24.3 °C	
6-1	Relative Humidity	6A000000FCC11426	Svr Room 7 Humidity	16.2 % RH	

Door Closure status icons
One open, One closed

Graphical display of temperature sensor value

Temperature sensor selected

Details about the selected sensor; the value will match the value in the Summary pane

Selected sensor's settings; click Edit to change a value; requires password

Identification

Uninitialized
Uninitialized
Uninitialized

Status

GXT4-1000RT120
Sensor
Normal Operation
Normal Operation
Normal Operation

Sensor

Summary
Active Events
Downloads
Sensor Subsystem
Sensor Change
Sensor Order

Door Closure Sensor [1]: Updated: March 27, 2015 01:26:20PM

Status	Value	Units
Measurement Position	1	
Door Closure State	Closed	

Events

Event	Status	Ack
Door Open	Normal	<input type="checkbox"/>

Settings **Edit** **Save** **Cancel** **Units**

Door Closure Sensor User Assigned Label	Svr Room 7 Front
Door Closure Sensor Asset Tag 01	
Door Closure Sensor Asset Tag 02	
Door Closure State Alarm Config	Alarm when open

4.5.2 Sensor Tab Summary Page-Details Pane

The Details pane of the Sensor Tab window appears when the Summary folder is selected. The area shows the status of all connected sensors (see **Figure 4-7**).

Supported sensors include:

- Temperature
- Humidity
- Door Closure
- Contact Closure
- Leak Detection

Selecting a sensor displays details for that sensor. The content of the details section is specific to the type of sensor selected. For example, a temperature sensor would show the temperature of the area where it is installed and a door sensor would show whether the door is open. The Unit of Measure used to display the temperature values is defined in the Display Temperature Units setting under Communications tab > Configuration > System. See **5.3.1 - Configuration Folder—System**.

Details for the sensors include the current state or reading, event status and whether the reading is above or below the threshold established in the Settings pane.

Figure 4-8 Sensor details—Door closure and temperature sensor examples

Door Closure Sensor [1]:

Updated: February 26, 2015 03:17:01PM

Status	Value	Units
Measurement Position	1	
Door Closure State	Closed	

Events	Status	Ack
Door Open	Normal	<input type="checkbox"/>

Settings	Edit	Save	Cancel	Units
Door Closure Sensor User Assigned Label				
Door Closure Sensor Asset Tag 01				
Door Closure Sensor Asset Tag 02				
Door Closure State Alarm Config	none			

Temperature Sensor:

Updated: February 26, 2015 03:21:30PM

Status	Value	Units
Temperature	24.6	°C

Events	Status	Ack
Over Temperature	Normal	<input type="checkbox"/>
Under Temperature	Normal	<input type="checkbox"/>

Settings	Edit	Save	Cancel	Units
Temperature Sensor User Assigned Label				
Temperature Sensor Asset Tag 01				
Temperature Sensor Asset Tag 02				
Over Temperature Alarm Threshold	37.0			°C
Over Temperature Warning Threshold	35.0			°C
Under Temperature Warning Threshold	20.0			°C
Under Temperature Alarm Threshold	18.0			°C

Click Edit in the Settings pane to change a value

Settings	Edit	Save	Cancel	Units
Door Closure Sensor User Assigned Label				
Door Closure Sensor Asset Tag 01				
Door Closure Sensor Asset Tag 02				
Door Closure State Alarm Config	none			

none
alarm when open

Editing a Door Closure Sensor
A label indicating the sensor's location can be added. The alarm configuration offers a drop-down menu to choose when an alarm will be activated.

4.6 Changing Sensor Order

Sensors are listed in the order they are installed. The order can be changed to put sensors deemed more important at the top of the list.

To change the order of the sensor list:

1. Click on Sensor Tab>Sensor Order.
2. Click on **Edit**.
3. Enter the user name and password.
4. Select the sensor to be moved higher or lower in the list. (This highlights the radio button beside the sensor to be changed.)
5. Use the arrows at the right side of the list to move the sensor up or down.
6. Click on **Save**.

Repeat the steps for any other sensors to be moved higher or lower in the list.

Figure 4-9 Changing sensor order

The screenshot shows the 'Sensor Order' configuration page for the GXT4-1000RT120 unit. The page has a sidebar with 'Identification', 'Status', and 'Sensor' tabs. The 'Sensor' tab is active, showing a list of sensors. The 'Sensor Order' sub-tab is selected. The main table lists sensors with columns for ID, Select, Type, Name, and Serial Number. Sensor 6 is selected, and its radio button is highlighted. Annotations show the up and down arrows used to move sensors in the list.

ID	Select	Type	Name	Serial Number
1	<input type="radio"/>	Temperature	127-6	F000000003769742
2	<input type="radio"/>	Temperature	127-9	A70000000368FA42
3	<input type="radio"/>	Door Closure	124-1 Front 124-1 Back	B90000000DE10420
4	<input type="radio"/>			
5	<input type="radio"/>	Temperature	124-1	0000000004323342
6	<input checked="" type="radio"/>	Temperature	124-5	54000000046B9142
7	<input type="radio"/>	Relative Humidity	ambient	6A000000FCC11426
8	<input type="radio"/>			
9	<input type="radio"/>			
10	<input type="radio"/>			

Click on a radio button to select a sensor to move up or down the list.

This arrow moves the selected sensor higher in the list.

This arrow moves the selected sensor lower in the list.


5.0 EDIT THE LIEBERT INTELLISLOT UNITY CARD CONFIGURATION

The Web-based interface can be used to change settings for the Liebert IntelliSlot Unity card and for the monitored equipment. The following steps apply to making changes in all sections of the Liebert IntelliSlot Unity card.

To edit the configuration:

1. Open a Web browser and enter the card's IP address.
2. Click on the Communications Tab.
3. Select the menu in the Tab Menu area that contains the configuration setting to be changed.
4. Click the **Edit** button near the top of the Web page (see **Figure 5-1**).
5. Enter the administrator name and password for the Liebert IntelliSlot Unity card in the dialog box that opens (the default settings are *Liebert* and *Liebert*).
6. Click **OK**.
7. Change the settings.
8. Click on **Save** to apply the changes or click **Cancel** to discard them.


Figure 5-1 Editing configuration settings

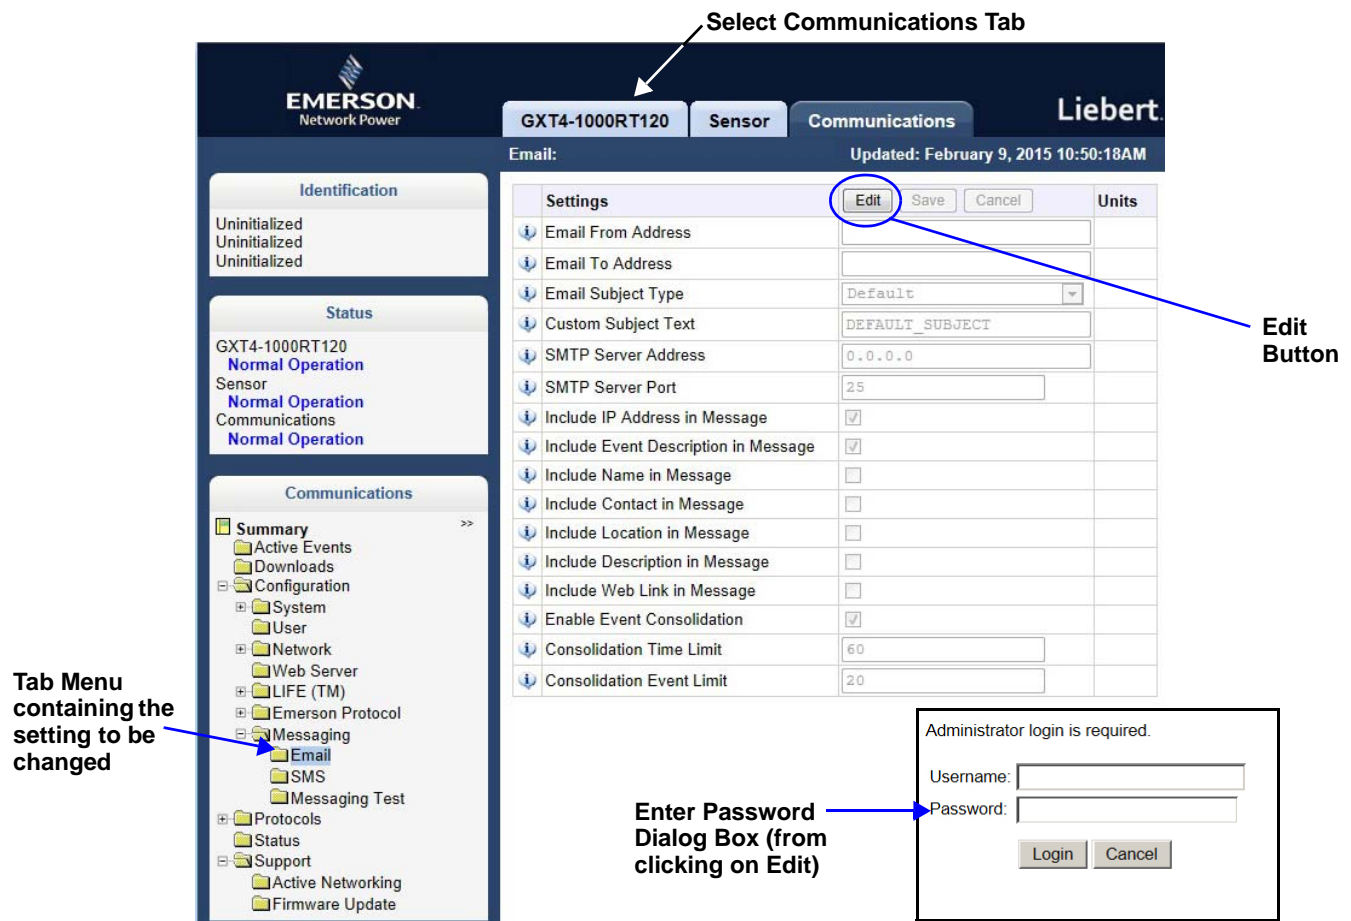

5.1 Web Page Communications Tab Folders

The Communications Tab contains information about the overall event status of the equipment and communication interface. It presents logs of third-party information, communication settings, third-party protocol settings and system status information.

The Communications Tab folders are shown at right.

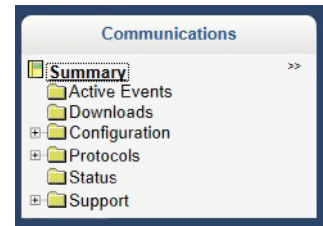


5.1.1 Communications Tab-Active Events Folder

The Communications Tab's Active Events folder contains no configurable settings. The folder displays events affecting the Liebert IntelliSlot Unity card.

5.2 Communications Tab-Downloads Folder


The Communications Tab's Downloads folder contains no configurable settings. The folder displays links to download logs of third-party protocols that are enabled on the Liebert IntelliSlot Unity card. The logs help in configuring and troubleshooting communication between the Network Management or Building Management Systems being used to monitor the managed device.

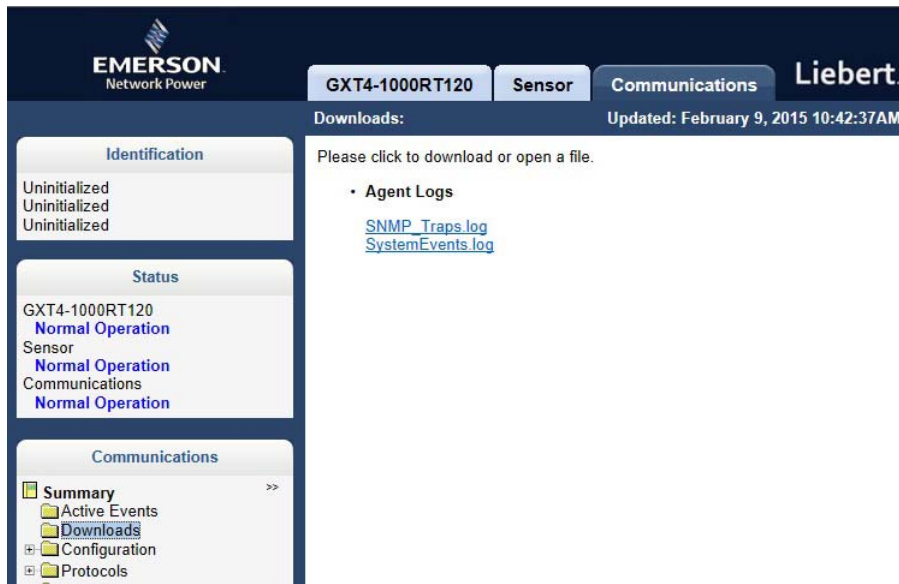

5.3 Communications Tab-Configuration Folder

The Configuration folder's top level displays the System Model Name of the Liebert IntelliSlot Unity card. This name is factory-set and cannot be changed (the **Edit** button is grayed out). The Configuration folder contains seven subfolders:


- System
- User
- Network
- Web Server
- LIFE™
- Emerson Protocol
- Messaging

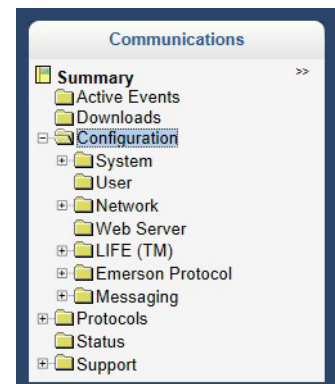

5.3.1 Configuration Folder—System

The System subfolder displays general information about the monitored and managed device and the display of some data. Refer to **Figure 5-2**. The data displayed is set by the user and can assist in troubleshooting. To alter the information displayed, click on the **Edit** button, enter the administrator name and password and make changes. Click **Save** to save the changes; click **Cancel** to discard the changes.

Figure 5-2 Configuration folder, System subfolder

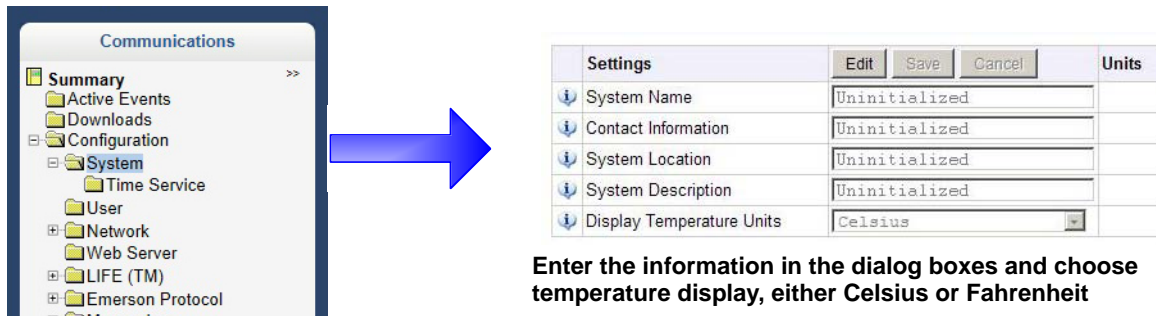

5.3.1.1 Time Service Settings

The System Subfolder contains one folder: Time Service. Each setting offers either a menu of choices or an enable/disable check box. Users can set these parameters


Figure 5-3 Configuration folder, System subfolder, Time Service

Settings	Edit	Save	Cancel	Units
External Time Source	NTP Server			
NTP Time Server	pool.ntp.org			
NTP Time Sync Rate	1 Hour			
Time Zone	(GMT-05:00) Eastern Ti			
Enable Auto-Sync To Managed Device	<input checked="" type="checkbox"/> enabled			
Managed Device Auto-Sync Rate	1 Hour			

- External Time Source—The external source to be used for time synchronization.
- NTP Time Server—Network Time Server (NTP) URL or IP address
- NTP Time Sync Rate—The rate at which time will be synchronized with the Network Time Protocol server, if NTP is the external time source.
- Time Zone—Time zone where the device is located.
- Enable Auto-Sync to Managed Device—Enable automatic writing time to the managed device.
- Managed Device Auto-Sync Rate—Rate at which time will be written to the managed device, if an external time source has been selected.

5.3.2 Configuration Folder—User

The User subfolder displays the administrator's and general user's name and password. Each can be changed. The default user name and password for the administrator are *Liebert* and *Liebert*. The defaults for the general user are *User* and *User*. To change either, click on **Edit**, enter the default username and password and enter the new information. Click on **Save** to accept the changes or click **Cancel** to discard the changes.

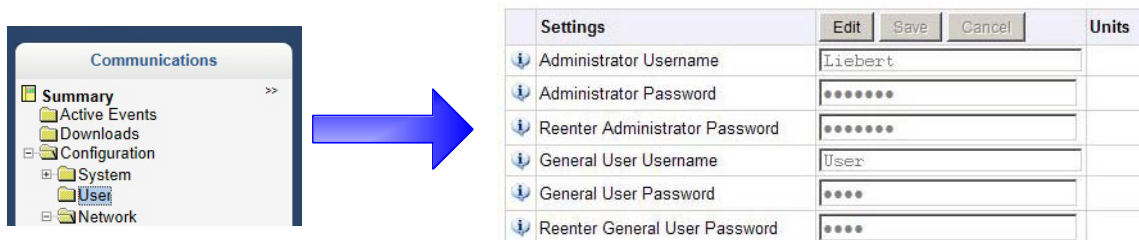

5.3.3 Configuration Folder—Network

The top level of the Network subfolder displays:


- Speed Duplex
- Domain Name Suffix List
- Telnet Server

The Speed Duplex item selects the speed and duplex configuration of the card's Ethernet port. It is set to Auto by default. If it requires changing, contact the system administrator for the proper settings.

The Domain Name Suffix List is a listing of domain name suffixes for resolution of hostnames. If it requires changing, contact the system administrator for the proper setting.

The Telnet Server item allows disabling telnet access to the card to prevent unauthorized changes. The default setting enables telnet access.

The Network subfolder contains three subfolders related to communication:

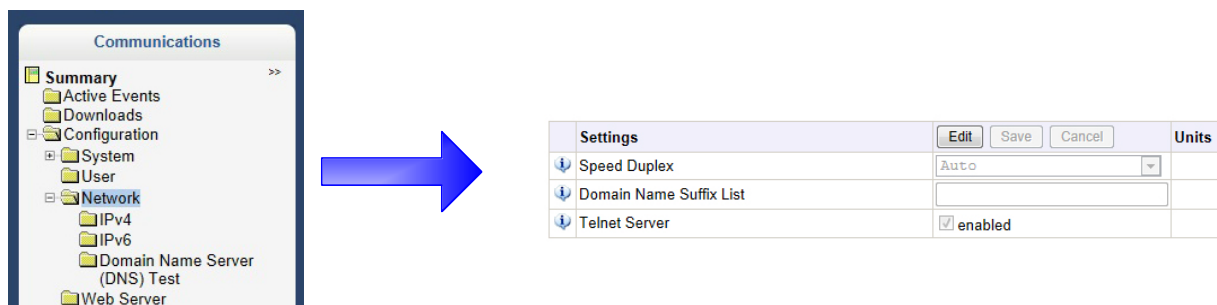

5.3.3.1 IPv4/IPv6

The IPv4 and IPv6 settings determine which Internet Protocol will be used for communication over the network connected to the Ethernet port. IPv4 and IPv6 networks will run in parallel (dual-stack network), but the protocols are different. See your network administrator to determine which protocol should be enabled and to determine the correct settings.

Figure 5-4 IPv4/IPv6 settings

Settings	Edit	Save	Cancel	Units
IPv4 Protocol	<input checked="" type="checkbox"/>	enabled		
Boot Mode		DHCP		
Card Static IP Address				
Subnet Mask		255.255.255.0		
Default Gateway				
DNS Server Address Source		Automatic		
IPv4 Primary DNS Server				
IPv4 Secondary DNS Server				

IPv4 Settings

Settings	Edit	Save	Cancel	Units
IPv6 Protocol	<input checked="" type="checkbox"/>	enabled		
Boot Mode		Auto		
Card Static IP Address				
Prefix Length		64		
Default Gateway				
DNS Server Address Source		Automatic		
IPv6 Primary DNS Server				
IPv6 Secondary DNS Server				

IPv6 Settings

IPv4 Settings


- IPv4 Protocol—Enables IPv4 in the card
- IP Address Method—Mode the card boots into to be a network ready device (Static, DHCP, BootP)
- Static IP Address—Network address for the interface
- Subnet Mask—Network mask for the interface which divides a network into manageable segments
- Default Gateway—IP address of the gateway for network traffic destined for other networks or subnets
- DNS Server Address Source—Source of DNS server identification (None, Automatic, Configured)
- Primary DNS Server
- Secondary DNS Server

IPv6 Settings

- IPv6 Protocol—Enables IPv6 in the card.
- IP Address Method—Mode the card boots into to be a network ready device (Static, Auto)
- Static IP Address—Network address for the interface.
- Prefix Length—Prefix length for the address that divides a network into manageable segments.
- Default Gateway—IP address of the gateway for network traffic destined for other networks or subnets.
- DNS Server Address Source—Source of DNS server identification (None, Automatic, Configured)
- Primary DNS Server
- Secondary DNS Server

5.3.3.2 Domain Name Server (DNS) Test

The Domain Name Server Test checks key points of a Domain Name Server (DNS) setup for a given domain.

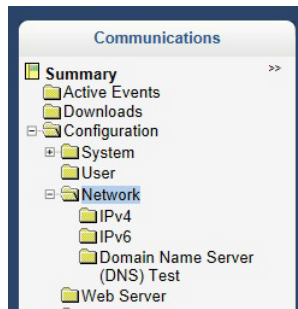

Status	Value	Units
Last Query Response		


Settings	Edit	Save	Cancel	Units
Type of Query				Hostname
Query Value				

Domain Name Server (DNS) Test Settings

- Last Query Response—Response from a domain name server (DNS) to the last query
Example: *gxtwebdemo.liebert.com* resolved to *126.4.203.234*
- Type of Query—Type of DNS query. (Hostname, IP Address)
- Query Value—Value for the domain name server (DNS) to resolve. Example:
gxtwebdemo.liebert.com

5.3.4 Configuration Folder—Web Server

The Web Server Settings permits making some security settings, such as HTTP or HTTPS, and password enabling.

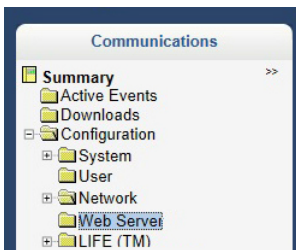

Settings	Edit	Save	Cancel	Units
Web Server Protocol				HTTP
HTTP Port				80
HTTPS Port				443
Password Protected Site				<input checked="" type="checkbox"/> enabled
Session Idle Timeout				5 min

Web Server Settings

- Web Server Protocol—Select the operation mode of the Web Server (HTTP, HTTPS)
- HTTP Port—Standard web port not encrypted. Required if HTTP is enabled as Web Server Protocol.
- HTTPS Port—Standard secure Web port; all communication is encrypted. Required if HTTPS is enabled as Web Server Protocol.
- Password Protect Site—When enabled, a login session is required before any device information is displayed to the user. User level credentials will allow only viewing of device information. Administrator level credentials are required to make any changes.
- Session Idle Timeout—The interval the software will wait before logging off a user unless there is user activity (Default is 5 min.)

5.3.5 Configuration Folder—LIFE™

The LIFE subfolder contains settings that affect use of the Emerson® LIFE Technology, a remote monitoring and diagnostic service for Emerson Network Power units. The LIFE settings are for use by trained Emerson Network Power personnel only and require no user changes. For information about the LIFE settings, refer to **Appendix A - Configuration Folder—LIFE™ Sub folder**.

5.3.6 Configuration Folder—Emerson Protocol

Emerson Protocol contains four subfolders: Managed Device, MSTP, Ethernet and Internal.




NOTE

With the exception of changing the node ID when multiple cards are used, the settings in the Emerson Protocol subfolders should not be modified unless directed by an Emerson representative.

5.4 Configuration Folder—Messaging

The Messaging subfolder permits enabling e-mail and text messaging about events. The subfolder also contains a test to determine whether notifications are sent. Settings for the two notification methods permit specifying who gets the notifications, the format and other details.

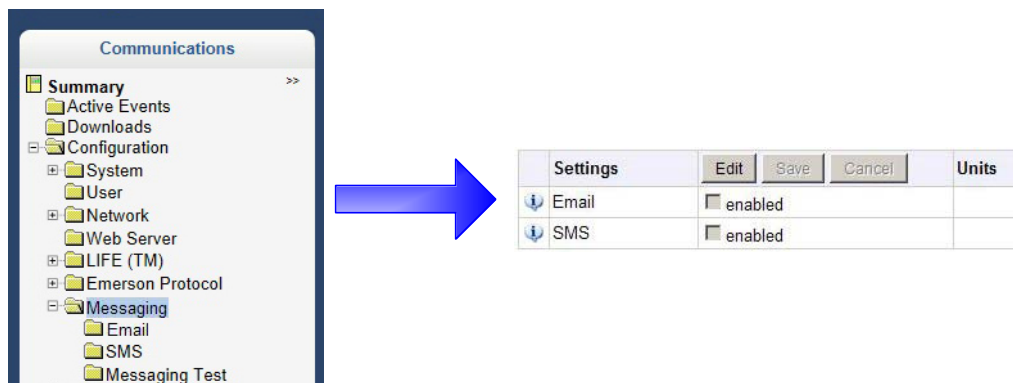

- Email—May be enabled to send e-mail messages about events
- SMS—May be enabled to send text messages about events

5.4.1 Email

Selections in Email determine how the card sends e-mails about events.

Settings	Edit	Save	Cancel	Units
Email From Address				
Email To Address				
Email Subject Type		Default		
Custom Subject Text		DEFAULT_SUBJECT		
SMTP Server Address		0.0.0.0		
SMTP Server Port		25		
Include IP Address in Message	<input checked="" type="checkbox"/>			
Include Event Description in Message	<input checked="" type="checkbox"/>			
Include Name in Message	<input type="checkbox"/>			
Include Contact in Message	<input type="checkbox"/>			
Include Location in Message	<input type="checkbox"/>			
Include Description in Message	<input type="checkbox"/>			
Include Web Link in Message	<input type="checkbox"/>			
Enable Event Consolidation	<input checked="" type="checkbox"/>			
Consolidation Time Limit		60		
Consolidation Event Limit		20		

5.4.2 Email Settings

- **Email From Address**—Sender's email address. In most cases this will be the email address of the person to whom replies should be sent. Example *Support@company.com*
- **Email To Address**—Email address of the recipient. Multiple email addresses should be separated by a semicolon. The maximum length for an email address is 64 characters.
- **Email Subject Type**—Subject of the email. This value will default to the event description. The subject line can be customized.
- **Custom Subject Text**—The subject of the email can be changed
- **SMTP Server Address**—Fully qualified domain name or IP address of the server used for relaying email messages. The maximum length for this entry is 32 characters. If using a server name, a DNS server must be configured under Network Settings.
- **SMTP Server Port**—SMTP server port. Note: Typically the default of 25 should be used.
- **Include IP Address in Message**—If checked, the IP Address of the agent card will be included in outgoing messages.
- **Include Event Description in Message**—If checked, SNMP event description will be included in outgoing messages.
- **Include Name in Message**—If checked, the agent card Name will be included in outgoing messages.
- **Include Contact in Message**—If checked, the agent card Contact will be included in outgoing messages.
- **Include Location in Message**—If checked the agent card Location will be included in outgoing messages.
- **Include Description in Message**—If checked, the agent card Description will be included in outgoing messages.
- **Include Web Link in Message**—If checked, a Web link to the agent card and Web Server listening port number will be included in outgoing messages.
- **Enable Event Consolidation**—If checked, multiple events will be sent per outgoing message.
- **Consolidation Time Limit**—If Event Consolidation is enabled, a message will be sent when 'Consolidation Time Limit' seconds has passed since the first buffered event was received.
- **Consolidation Event Limit**—If Event Consolidation is enabled, a message will be sent when the number of buffered events reaches the 'Consolidation Event Limit.'

5.4.3 SMS

Selections in SMS determine how the card sends text messages about events.

Settings	Edit	Save	Cancel	Units
SMS From Address				
SMS To Address				
SMS Subject Type	Default			
Custom Subject Text	DEFAULT_SUBJECT			
SMTP Server Address	0.0.0.0			
SMTP Server Port	25			
Include IP Address in Message	<input checked="" type="checkbox"/>			
Include Event Description in Message	<input checked="" type="checkbox"/>			
Include Name in Message	<input type="checkbox"/>			
Include Contact in Message	<input type="checkbox"/>			
Include Location in Message	<input type="checkbox"/>			
Include Description in Message	<input type="checkbox"/>			
Include Web Link in Message	<input type="checkbox"/>			
Enable Event Consolidation	<input checked="" type="checkbox"/>			
Consolidation Time Limit	60			
Consolidation Event Limit	20			

SMS Settings

- **SMS From Address**—Sender's SMS address. In most cases this will be the SMS address of the person to whom replies should be sent. For example: Support@company.com
- **SMS To Address**—SMS address of the recipient. Multiple SMS addresses should be separated by a semicolon. Note: The maximum length for an SMS address entry is 64 characters.
- **SMS Subject Type**—Subject of the message, either Default or Custom.
- **Custom Subject Text**—The subject of the message; can be customized by the customer
- **SMTP Server Address**—Fully qualified domain name or IP address of the server used for relaying SMS messages. The maximum length for this entry is 32 characters. Note 2: If using a server name, a DNS server must be configured under IP Settings.
- **SMTP Server Port**—SMTP server port. Note: Typically the default of 25 should be used.
- **Include IP Address in Message**—If checked the IP Address of the agent card will be included in outgoing messages.
- **Include Event Description in Message**—If checked SNMP event description will be included in outgoing messages.
- **Include Name in Message**—If checked the agent card Name will be included in outgoing messages.
- **Include Contact in Message**—If checked the agent card Contact will be included in outgoing messages.
- **Include Location in Message**—If checked the agent card Location will be included in outgoing messages.
- **Include Description in Message**—If checked the agent card Description will be included in outgoing messages.
- **Include Web Link in Message**—If checked a Web link to the agent card and Web Server listening port number will be included in outgoing messages.
- **Enable Event Consolidation**—If checked multiple events will be sent per outgoing message.
- **Consolidation Time Limit**—If Event Consolidation is enabled, a message will be sent when "Consolidation Time Limit" seconds has passed since the first buffered event was received.
- **Consolidation Event Limit**—If Event Consolidation is enabled, a message will be sent when the number of buffered events reaches the "Consolidation Event Limit."

5.4.4 Messaging Test


Selections here permit testing the setup for e-mail and SMS messages. If the test fails, incorrect settings should be changed to ensure that the Liebert IntelliSlot Unity card sends proper notifications if an event should occur.

Status	Value	Units
⬇ Messaging Test Results		

Settings	Edit	Save	Cancel	Units
⬇ Send Test Message	Idle			

5.5 Communications Tab—Protocols

The Protocols folder displays the types of protocols that may be enabled for a Liebert IntelliSlot Unity card. Not all protocols are available at the same time. Some protocols may not be available for some types of managed devices (see **1.2 - Compatibility With Other Emerson Products and Communication Protocols**). The Liebert IntelliSlot Unity card allows selecting two third-party protocols.

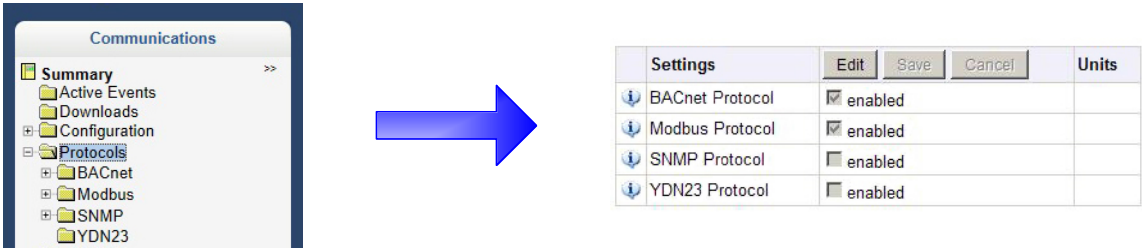


The folders contained by the Protocols folder are:

- **BACnet**
 - BACnet IP
 - BACnet MSTP
- **Modbus**
 - Modbus TCP
 - Modbus RTU
- **SNMP**
 - SNMPv3 User (20)
 - SNMPv1 Trap (20)
 - SNMPv1/v2c Access (20)
- **YDN23**

Settings in each permit configuring the protocols available on the Liebert IntelliSlot Unity card.

5.6 Protocols Folder—BACnet Folder

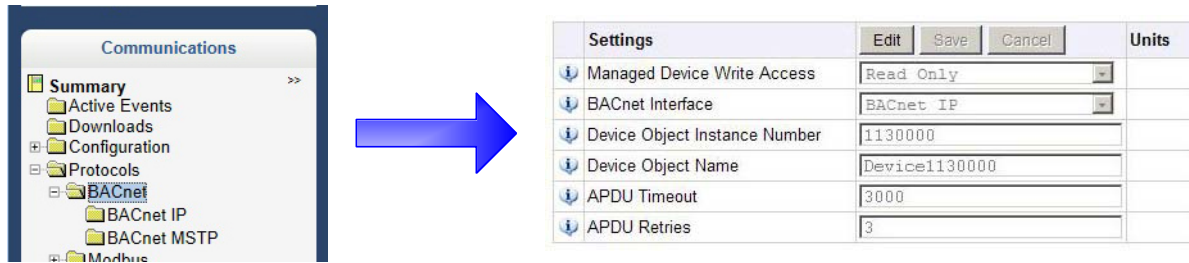

BACnet Settings

- Managed Device Write Access—Enable or Disable the BACnet server to write to the managed device.
- BACnet Interface—BACnet server interface: BACnet IP or BACnet MSTP.
- Device Object Instance Number—The instance number (0-4194302) of the BACnet server's device object.
- Device Object Name—The name of the BACnet server's device object.
- APDU Timeout—The timeout in milliseconds between APDU retries (1-65535).
- APDU Retries—The number of times to retransmit an APDU after the initial attempt (0-8).


5.6.1 Protocols Folder—BACnet IP Folder



BACnet IP Settings

- BACnet IP Port Number—The port for the BACnet server's UDP/IP connection.
- Register as Foreign Device—Enable or Disable registration as a foreign device.
- IP Address of BBMD—IP Address of the BACnet Broadcast Management Device (BBMD) to be accessed for Foreign Device Registration
- Foreign Device Time-to Live—Time to remain in the BBMD Foreign Device table after registration.

5.6.2 Protocols Folder—BACnet MSTP Folder

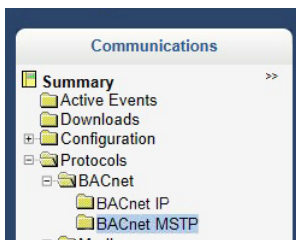


Settings	Edit	Save	Cancel	Units
Node ID				
Data Rate				
Max Master Address				
Max Info Frames				

BACnet MSTP Settings

- Node ID—The BACnet server's MS/TP node ID (MAC).
- Data Rate—The BACnet MSTP communication rate (bits per second).
- Max Master Address—The maximum node ID (MAC) in use on the MS/TP network.
- Max Info Frames—Maximum number of information frames this node may send before it must pass the token.

5.7 Protocols Folder—Modbus

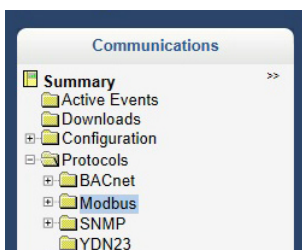

Settings	Edit	Save	Cancel	Units
Managed Device Write Access				
Modbus Interface				


Modbus Settings

- Managed Device Write Access—Enable or Disable the Modbus server to write to the managed device
- Modbus Interface—Select the Modbus interface, either Modbus TCP or Modbus RTU

5.7.1 Modbus TCP

The Modbus TCP permits connection to the card by:

- any client (Open) permits communication by any IP address
- clients on the same subnet as the Liebert IntelliSlot Unity card
- clients with specific IP addresses (Trusted IP Lists); only five addresses are permitted

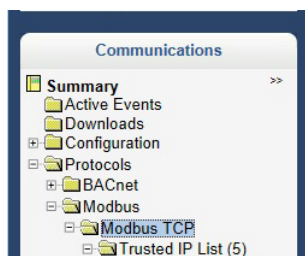


Settings	Edit	Save	Cancel	Units
Limit Network Access Type				
Port				
Maximum Client Connection Count				

Modbus TCP Settings

- Limit Network Access Type
- IP Access List (Open, Same Subnet, Trusted IP List)
- Port—The TCP port used by the Modbus Server to listen for and respond to Modbus protocol requests based on Limit Network Access Type setting.
- Maximum Client Connection Count

5.7.2 Modbus RTU

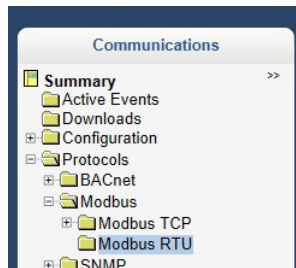


Settings	Edit	Save	Cancel	Units
Node ID	1			
Baud Rate	9600			
Parity Check	None			

Modbus RTU Settings

- Node ID—Modbus Server ID for the interface; obtain from network administrator.
- Baud Rate—Communication rate (9600, 19200, 38400)
- Parity Check—The communication parity check (None, Even, Odd)

5.8 Protocols Folder—SNMP Subfolder

Folders and settings in this folder permit configuring the card for various types of SNMP communication, including access, traps and other user settings.

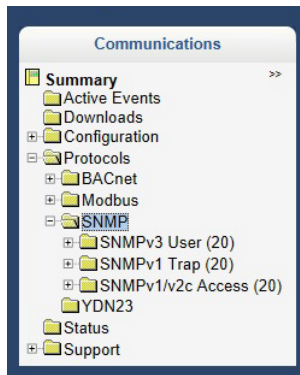

Status	Value	Units
SNMPv3 Engine ID	800001DC03000068123451	

Settings	Edit	Save	Cancel	Units
SNMPv1/v2c Enable	<input checked="" type="checkbox"/>	enabled		
SNMPv3 Enable	<input checked="" type="checkbox"/>	enabled		
Authentication Traps	<input checked="" type="checkbox"/>	enabled		
Heartbeat Trap Interval		24 hours		
RFC-1628 MIB	<input checked="" type="checkbox"/>	enabled		
RFC-1628 MIB Traps	<input checked="" type="checkbox"/>	enabled		
Liebert Global Products (LGP) MIB	<input checked="" type="checkbox"/>	enabled		
LGP MIB Traps	<input checked="" type="checkbox"/>	enabled		
LGP MIB System Notify Trap	<input checked="" type="checkbox"/>	enabled		

SNMP Settings

- **SNMPv3 Engine ID**—The SNMPv3 engine ID; assigned automatically
- **SNMP v1/v2c Enable**—Enable or Disable SNMP v1/v2c
- **SNMP v3 Enable**—Enable or Disable SNMPv3
- **Authentication Traps**—An Authentication Trap is sent if an SNMP host tries to access the card via SNMP, but either the host address is not in the SNMP Access Settings or it is using the wrong Community String.
- **Heartbeat Trap Interval**—Enable or Disable and set interval 5 minutes, 30 minutes, 1 hour, 4 hours, 8 hours, 12 hours and 24 hours
- **RFC-1628 MIB**—Enable or Disable support for retrieval of data from the RFC-1628 MIB objects. Required for proper operation of Liebert MultiLink[®] and applies only to managed UPS equipment
- **RFC-1628 MIB Traps**—Enable or Disable support for sending RFC-1628 traps. Required for proper operation of Liebert MultiLink and applies only to managed UPS equipment
- **Liebert Global Products (LGP) MIB**—Enable or Disable support for getting and setting data using the Liebert Global Products MIB.
- **LGP MIB Traps**—Enable or Disable support for Liebert Global Products MIB traps. LGP traps will not be sent unless LGP MIB is enabled.
- **LGP MIB System Notify Trap**—Enable or Disable support for the LGP System Notification trap. This is a single trap sent each time an alarm or warning is added or removed from the conditions table. It provides a text description of the event in a varbind of the trap message. LGP System Notify Traps will not be generated unless the LGP MIB is enabled.

5.8.1 SNMPv3 User Settings

The Liebert IntelliSlot-Unity card supports up to 20 SNMPv3 users. The top level page has a table with settings for all 20. The page displays a link to edit the table columns displayed for each SNMPv3 user. The same settings may be accessed by clicking on a folder for a user, such as SNMPv3 User [1].

The Web page below shows the settings that can be changed for a SNMPv3 user. To display the settings, click on any of the SNMPv3 User links. After making any changes, click **Save** to make the changes effective; click **Cancel** to discard the changes.

Click on a SNMPv3 User folder or a link to get this settings page.

Report	SNMPv3 User Enable
SNMPv3 User [1]	disabled
SNMPv3 User [2]	disabled
SNMPv3 User [3]	disabled
SNMPv3 User [4]	disabled
SNMPv3 User [5]	disabled
SNMPv3 User [6]	disabled
SNMPv3 User [7]	disabled
SNMPv3 User [8]	disabled
SNMPv3 User [9]	disabled
SNMPv3 User [10]	disabled
SNMPv3 User [11]	disabled
SNMPv3 User [12]	disabled
SNMPv3 User [13]	disabled
SNMPv3 User [14]	disabled
SNMPv3 User [15]	disabled
SNMPv3 User [16]	disabled
SNMPv3 User [17]	disabled
SNMPv3 User [18]	disabled
SNMPv3 User [19]	disabled
SNMPv3 User [20]	disabled

Settings	Edit	Save	Cancel	Units
SNMPv3 User Enable	<input checked="" type="checkbox"/>			
SNMPv3 Username	<input type="text"/>			
SNMPv3 Access Type	<input type="text" value="Read Only"/>			
SNMPv3 Authentication	<input type="text" value="None"/>			
SNMPv3 Authentication Secret	<input type="text"/>			
SNMPv3 Privacy	<input type="text" value="None"/>			
SNMPv3 Privacy Secret	<input type="text"/>			
SNMPv3 Trap Targets	<input type="text"/>			
SNMPv3 Trap Port	<input type="text" value="162"/>			

SNMPv3 User Settings

- **SNMPv3 User Enable**—Select to enable read, write or sending notifications with the user's credentials.
- **SNMPv3 Username**—The User name the authentication and privacy settings apply to. This string can be composed of printable characters except colon, tab, double quote, and question mark.
- **SNMPv3 Access Type**—Read Only, Read/Write or Traps only
- **SNMPv3 Authentication**—Cryptographic algorithm used for authentication: None, MD5 or SHA-1
- **SNMPv3 Authentication Secret**—Pass phrase or password used for SNMPv3 Get request. This string can be composed of printable characters with the exception of colon, tab, double quote, and question mark. Note: The entry must be 8 or more characters but not more than 64.
- **SNMPv3 Privacy**—Cryptographic algorithm used for encryption: None or DES.

- SNMPv3 Privacy Secret—Pass phrase or password used for SNMPv3 Get request. This string can be composed of printable characters with the exception of colon, tab, double quote, and question mark. Note: The entry must be 8 or more characters but not more than 64.
- SNMPv3 Trap Target Addresses—Network hosts that will receive SNMPv3 traps, identified with either a network name or IP address. Multiple addresses must be separated by commas. The field has a maximum length of 125 characters
- SNMPv3 Trap Port—Port used by the target host for receiving SNMPv3 traps; default is 162.

5.8.2 Edit the SNMPv3 Table

The table on the SNMPv3 User Settings [20] page may be altered to provide more or less information. To do so, click on the command above the table (Click here to edit columns displayed in this table). Put a check mark (?) in the boxes beside the desired information (see **Figure 5-5**). The choices permit showing the same information in this screen that is displayed by clicking on a SNMPv3 User Settings folder or a SNMPv3 User Settings link.

Figure 5-5 Edit the SNMPv3 table

Click on this link to change the information shown in the table

Click here to edit columns displayed in the table

Report	SNMPv3 User Enable
SNMPv3 User [1]	disabled
SNMPv3 User [2]	disabled
SNMPv3 User [3]	disabled
SNMPv3 User [4]	disabled
SNMPv3 User [5]	disabled
SNMPv3 User [6]	disabled
SNMPv3 User [7]	disabled
SNMPv3 User [8]	disabled
SNMPv3 User [9]	disabled
SNMPv3 User [10]	disabled
SNMPv3 User [11]	disabled
SNMPv3 User [12]	disabled
SNMPv3 User [13]	disabled
SNMPv3 User [14]	disabled
SNMPv3 User [15]	disabled
SNMPv3 User [16]	disabled
SNMPv3 User [17]	disabled
SNMPv3 User [18]	disabled
SNMPv3 User [19]	disabled
SNMPv3 User [20]	disabled

Choose data points to be displayed as columns in the table and hit 'Update' button. To exit without changes, hit 'Cancel' button. (Note: Information is saved as browser cookies.)

- ☒ SNMPv3 User Enable
- ☐ SNMPv3 Username
- ☐ SNMPv3 Access Type
- ☐ SNMPv3 Authentication
- ☐ SNMPv3 Authentication Secret
- ☐ SNMPv3 Privacy
- ☐ SNMPv3 Privacy Secret
- ☐ SNMPv3 Trap Targets
- ☐ SNMPv3 Trap Port

Advanced Settings:
Number of tables: 1

☐ Hide column text (Useful to reduce a width of table)

Update Cancel

Checking all choices will display the information below on the SNMPv3 User page.

SNMPv3 User Enable	SNMPv3 Username	SNMPv3 Access Type	SNMPv3 Authentication	SNMPv3 Authentication Secret	SNMPv3 Privacy	SNMPv3 Privacy Secret	SNMPv3 Trap Targets	SNMPv3 Trap Port
disabled		Read Only	None		None			162

The information in the table for one user may be viewed by clicking on a SNMPv3 User Settings folder or a SNMPv3 User Settings link, as shown at right.

Settings	Edit	Save	Cancel	Units
SNMPv3 User Enable	<input checked="" type="checkbox"/>	enabled		
SNMPv3 Username				
SNMPv3 Access Type		Read Only		
SNMPv3 Authentication		None		
SNMPv3 Authentication Secret				
SNMPv3 Privacy		None		
SNMPv3 Privacy Secret				
SNMPv3 Trap Targets				
SNMPv3 Trap Port		162		

5.8.3 SNMPv1 Trap Settings

This page contains settings for network hosts that will receive SNMPv1 traps. Up to 20 trap recipients may be enabled and configured. Like the SNMPv3 pages, the settings for each target may be reached by clicking on the links in the **Detail** portion of the page or by clicking on the folders for the trap targets. Also, data shown in the table may be changed by clicking on the link above the table.

The screenshot displays the Liebert IntelliSlot Unity Card Configuration web interface. The top navigation bar includes the Emerson Network Power logo, the device name 'GXT4-1000RT120', and tabs for 'Sensor' and 'Communications'. The 'Communications' tab is active, showing the 'SNMPv1 Trap [1]:Table' section. A status bar at the top right indicates 'Welcome Liebert (Administrator)' and a 'Logout' button. The left sidebar contains a tree view with sections: Identification (Uninitialized), Status (GXT4-1000RT120 Normal Operation, Sensor Normal Operation, Communications Normal Operation), and Communications (Summary, Active Events, Downloads, Configuration, Protocols, BACnet, Modbus, SNMP, SNMPv3 User (20), and SNMPv1 Trap (20)). The SNMPv1 Trap (20) folder is expanded, showing links for 'SNMPv1 Trap [1]', 'SNMPv1 Trap [2]', and 'SNMPv1 Trap [3]'. The main content area features a table titled 'SNMPv1 Trap [1]:Table' with columns 'Report' and 'SNMP Trap Target'. The table lists 20 entries, each with a link to edit the target. A blue arrow points from the text 'Click on this link to change the information shown in the table.' to the link 'Click here to edit columns displayed in the table'. A grey arrow points from the 'SNMPv1 Trap [1]' link in the table to the 'Settings' panel on the right. The 'Settings' panel includes buttons for 'Edit', 'Save', and 'Cancel', and a 'Units' column. The settings table shows the following values:

Settings	Edit	Save	Cancel	Units
SNMP Trap Target		126.4.202.194		
SNMP Trap Port		162		
SNMP Trap Community String		*****		

SNMPv1 Trap Settings

- **SNMP Trap Target Addresses**—Configure network hosts that will receive alert notifications (i.e., SNMP Traps). The host can be identified as either an IP address or the host's network name.
- **SNMP Trap Port**—Port used by the target host for receiving notifications; default is 162.
- **SNMP Trap Community String**—String identifying a 'secret' known only by those hosts that want to be notified of device status changes.

5.8.4 SNMPv1/v2c Access

This page contains settings for network hosts that can access data using SNMPv1/v2c. Up to 20 access hosts can be enabled and configured. Like the SNMPv3 pages, the setting for each host may be reached by clicking on the links in the data portion of the page or by clicking on the folders for the access hosts. Also, data shown in the table may be changed by clicking on the link above the table.

The screenshot shows the Liebert IntelliSlot Unity Card Configuration web interface. The top navigation bar includes the Emerson Network Power logo, the device name 'GXT4-1000RT120', the 'Sensor' tab, and the 'Communications' tab. The main content area is titled 'SNMPv1/v2c Access [1]: Table' and shows a table of access hosts. A link 'Click here to edit columns displayed in the table' is located above the table. The table has two columns: 'Report' and 'SNMP Access Host'. The 'Report' column contains links for each of the 20 access hosts, ranging from 'SNMPv1/v2c Access [1]' to 'SNMPv1/v2c Access [20]'. The 'SNMP Access Host' column shows the IP address '0.0.0.0' for the first host. A sidebar on the left contains a tree view of configuration options, including 'Summary', 'Active Events', 'Downloads', 'Configuration', 'Protocols', 'BACnet', 'Modbus', 'SNMP', 'SNMPv3 User (20)', 'SNMPv1 Trap (20)', and 'SNMPv1/v2c Access (20)'. The 'SNMPv1/v2c Access (20)' folder is expanded, showing a list of access hosts. A settings panel for editing a specific host is shown at the bottom right, with fields for 'SNMP Access Host' (0.0.0.0), 'SNMP Access Type' (Read Only), and 'SNMP Access Community String' (*****). Annotations with arrows point to the 'Click here to edit columns displayed in the table' link, the 'SNMPv1/v2c Access [1]' link, and the 'SNMPv1/v2c Access (20)' folder.

Click on this link to change the information shown in the table on this page to the information shown below.

Click on a SNMPv1/v2c Access folder or a link to get this settings page.

Report	SNMP Access Host
SNMPv1/v2c Access [1]	0.0.0.0
SNMPv1/v2c Access [2]	
SNMPv1/v2c Access [3]	
SNMPv1/v2c Access [4]	
SNMPv1/v2c Access [5]	
SNMPv1/v2c Access [6]	
SNMPv1/v2c Access [7]	
SNMPv1/v2c Access [8]	
SNMPv1/v2c Access [9]	
SNMPv1/v2c Access [10]	
SNMPv1/v2c Access [11]	
SNMPv1/v2c Access [12]	
SNMPv1/v2c Access [13]	
SNMPv1/v2c Access [14]	
SNMPv1/v2c Access [15]	
SNMPv1/v2c Access [16]	
SNMPv1/v2c Access [17]	
SNMPv1/v2c Access [18]	
SNMPv1/v2c Access [19]	
SNMPv1/v2c Access [20]	

Settings	Edit	Save	Cancel	Units
SNMP Access Host				0.0.0.0
SNMP Access Type				Read Only
SNMP Access Community String				*****

SNMPv1/v2c Access Settings

- SNMP Access IP Address—Configure network hosts interested in device information access. The host can be identified as either an IP address or the host's network name
- SNMP Access Type—SNMPv1/v2C access type: Read Only or Read/Write
- SNMP Access Community String—SNMP Community String

5.9 Protocols Folder—YDN23 Protocol

The YDN23 protocol supported is based on the YD-T-1363 specification using an RS-485 network connection.

The screenshot shows the Liebert IntelliSlot Unity Card Configuration web interface. The top navigation bar includes the Emerson Network Power logo, the device name 'GXT4-1000RT120', the 'Sensor' tab, the 'Communications' tab, and the 'Liebert' logo. A 'Welcome Liebert (Administrator)' message and a 'Logout' button are also present. The main content area is titled 'YDN23:' and shows the configuration for the YDN23 protocol. The left sidebar contains a tree view with folders for 'Identification', 'Status', and 'Communications'. The 'Status' folder is expanded, showing 'GXT4-1000RT120' with 'Normal Operation' status for 'Sensor', 'Communications', and 'YDN23'. The 'Communications' folder is also expanded, showing a 'Summary' view with a tree view of 'Active Events', 'Downloads', 'Configuration', 'Protocols', 'BACnet', 'Modbus', 'SNMP', 'YDN23', 'Status', and 'Support'. The 'YDN23' folder is selected. The main content area displays the 'Settings' for the YDN23 protocol, including 'Managed Device Write Access' (Read Only), 'Device Address' (1), and 'Data Rate' (9600). There are 'Edit', 'Save', and 'Cancel' buttons, and a 'Units' column.

Settings	Edit	Save	Cancel	Units
Managed Device Write Access	Read Only			
Device Address	1			
Data Rate	9600			

YDN23 Protocol

- Managed Device Write Access—Enable or Disable the YDN23 server to write to the managed device.
- Device Address—YDN23 device address
- Baud Rate—The communications rate in bps.

5.10 Configuration—Communications Tab-Status Folder

The Status folder contains no configurable items. It displays the System Status of the Liebert IntelliSlot Unity card and a list of events that affect the card's status. A green check mark (✓) indicates the status is Normal, as shown in the Status column

EMERSON Network Power **GXT4-1000RT120** **Sensor** **Communications** **Liebert.**

Status: Updated: February 9, 2015 10:46:30AM

Identification

Uninitialized
Uninitialized
Uninitialized

Status

GXT4-1000RT120
Normal Operation
Sensor
Normal Operation
Communications
Normal Operation

Communications

Summary >>
Active Events
Downloads
Configuration
Protocols
Status
Support

Status	Value	Units
System Status	Normal Operation	

Events	Status	Ack
System Restart Required	Normal	<input type="checkbox"/>
LIFE (TM) device identity changed - LIFE (TM) needs to be reconfigured.	Normal	<input type="checkbox"/>
RS-485 Port Conflict	Normal	<input type="checkbox"/>
Duplicate Emerson Protocol MSTP Node ID	Normal	<input type="checkbox"/>
Duplicate BACnet MSTP Node ID	Normal	<input type="checkbox"/>

5.11 Configuration—Communications Tab-Support Folder

The Support folder permits restarting the Liebert IntelliSlot Unity card, resetting the card to its factory defaults and updating the card's firmware. *Agent* refers to the Liebert IntelliSlot Unity card.

The folder also displays information about the card for help in troubleshooting, such as the card's firmware version, label, MAC address and related information.

EMERSON Network Power **GXT4-1000RT120** **Sensor** **Communications** **Liebert.**

Welcome Liebert (Administrator) Logout

Support: Updated: February 9, 2015 11:35:29AM

Identification

Uninitialized
Uninitialized
Uninitialized

Status

GXT4-1000RT120
Normal Operation
Sensor
Normal Operation
Communications
Normal Operation

Communications

Summary >>
Active Events
Downloads
Configuration
Protocols
Status
Support
Active Networking

Status	Value	Units
Agent Date and Time	2015-02-09 16:35:27	
Agent Model	Unity Platform	
Agent App Firmware Version	5.0.0.0	
Agent App Firmware Label	IS-UNITY_5.0.0.0_90595	
Agent Boot Firmware Version	1.0.0.0	
Agent Boot Firmware Label	UNITY_HID1_1.0.0.0_00000	
Agent Serial Number	417831G201D2012MAY310001	
Agent Manufacture Date	MAY 31 2012	
Agent Hardware Version	1	
GDD Version	99569	
FDM Version	941	
Product Sequence ID	11.1	

Commands	Enable	Cancel
Restart Card	Restart	
Reset Card to Factory Defaults	Reset to Factory Defaults	
Generate and download diagnostic file	Get File	

Support Folder Settings

- Agent Date and Time—Date and time setting for the card.
- Agent Model—The card's model (Unity Platform)
- Agent App Firmware Version—The card's firmware version (2.0 or higher)
- Agent App Firmware Label—The card's firmware label
- Agent Boot Firmware Version—The card's Boot firmware version
- Agent Boot Firmware Label—The card's boot firmware label
- Agent Serial Number—The card's serial number
- Agent Manufacture Date—The card's manufacture date
- Agent Hardware Version—The card's hardware version
- GDD Version—The card's GDD version, current when the card's firmware was installed; the GDD is a proprietary reference document for device data.
- FDM Version—The card's FDM version; the FDM is a data model document that defines data supported by devices that use the Emerson Protocol.
- Product Sequence ID—The card's product sequence identifier
- **Commands - Enable/Cancel**
- Restart Card—Restart card and implement configuration changes
- Reset Card to Factory Defaults—Reset the card's configuration to its factory defaults
- Generate and download diagnostic file—Generate a file containing diagnostic information and download it with a Web browser.

5.11.1 Communications Tab-Support Folder—Active Networking

Status of the currently active IP network settings for the Liebert IntelliSlot Unity card along with some previous values for troubleshooting IP communication issues.

The screenshot shows the Emerson Network Power web interface for the GXT4-1000RT120 card. The 'Communications' tab is selected, and the 'Active Networking' section is expanded. The card's status is 'Normal Operation'. A table lists various network settings with their current values and units.

Status	Value	Units
Ethernet MAC	00:00:68:10:11:4f	
IPv4 Address	126.4.212.175	
IPv4 Default Gateway	126.4.212.1	
IPv4 Primary DNS Server	10.203.52.131	
IPv4 Secondary DNS Server	10.20.64.11	
Last DHCP/BOOTP Address		
Last DHCP Lease	0	sec
IPv6 Global Address		
IPv6 SLAAC Address		
IPv6 Link Local Address	fe80::200:68ff:fe10:114f	
IPv6 Default Gateway		
IPv6 Primary DNS Server		
IPv6 Secondary DNS Server		
Last DHCPv6 Address		
Last DHCPv6 Lease	0	sec

Active Networking

- Ethernet MAC Address—Ethernet MAC Address for the Liebert IntelliSlot card
- IPv4 Address—Presently used IPv4 network address
- IPv4 Default Gateway—Presently used IPv4 network address of the gateway for network traffic destined for other networks or subnets
- Primary DNS—Presently used IPv4 Primary DNS
- Secondary DNS—Presently used IPv4 Secondary DNS
- Last DHCP/BOOTP Address—Last known IPv4 address assigned by DHCP
- Last DHCP Lease—Lease time of last known DHCP address
- IPv6 Global Address—Shows if DHCPv6 or Static address is presently being used
- Stateless Address AutoConfiguration—IPv6 SLAAC is assigned automatically from Router Advertisement, if “A” flag is set, combining Prefix with EUI-64 MAC
- Link Local—Presently used IPv6 Link Local Address
- IPv6 Default Gateway—Presently used IPv6 network address of the gateway for network traffic destined for other networks or subnets
- Primary DNS Server—IPv6 Primary DNS
- Secondary DNS Server—Presently used IPv6 Secondary DNS
- Last DHCPv6—Last known IPv6 address assigned by DHCPv6
- Last DHCPv6 Lease—Lease time of last known DHCPv6 address

5.11.2 Communications Tab-Support Folder—Firmware Update

The Firmware Update folder supports updating the firmware of the Liebert IntelliSlot Unity card or reverting to an alternate firmware version and configuration (if the current firmware is not the initial load).



The screenshot displays the Liebert IntelliSlot Unity Card web interface. The top navigation bar includes the Emerson Network Power logo, the user name 'Welcome Liebert (Administrator)', a 'Logout' button, and the 'Liebert' brand name. The main navigation tabs are 'GXT4-1000RT120', 'Sensor', and 'Communications'. The 'Communications' tab is selected, and the 'Firmware Update' folder is active. The interface shows the current firmware version (5.0.0.0) and label (IS-UNITY_5.0.0.0_90905). It also lists alternate firmware versions and labels. The 'Commands' section includes buttons for 'Run Alternate Firmware' and 'Firmware Update'. The left sidebar shows the 'Support' folder expanded, with 'Firmware Update' selected.

Status	Value	Units
Current Firmware Version	5.0.0.0	
Current Firmware Label	IS-UNITY_5.0.0.0_90905	
Current Firmware Date	Feb 23 2015 - 16:23:59	
Alternate Firmware Version	5.0.0.0	
Alternate Firmware Label	IS-UNITY_5.0.0.0_000000_DB	
Alternate Firmware Date	Feb 17 2015 - 10:40:24	

Commands	Buttons
Run Alternate Firmware	Run Alternate
Firmware Update	Web

Firmware Update

- Current Firmware Version—The version of the firmware running on the card
- Current Firmware Label—The label of the firmware running on the card
- Current Firmware Date—The build date of the firmware running on the card
- Alternate Firmware Version—The version of the firmware in the alternate area
- Alternate Firmware Label—The label of the firmware in the alternate area
- Alternate Firmware Date—The build date of the firmware in the alternate area
- **Commands**
- Run Alternate Firmware—Return the card's firmware to a version in the alternate area (the version in use before the most recent firmware update).
- Firmware Update—Update the card's firmware to a new version

Commands		Enable	Cancel
	Run Alternate Firmware	Run Alternate	
	Firmware Update	Web	

6.0 FIRMWARE UPDATES

The Liebert IntelliSlot Unity card has two areas in flash memory for the firmware and the configuration. One area is currently operating on the card. The other area is the previous firmware on the card and is considered an alternate. For information on the alternate firmware, see **6.2 - Revert to Alternate Firmware**.


6.1 Updating the Liebert IntelliSlot Unity Card's Firmware

To update the Liebert IntelliSlot Unity card's firmware:

1. Download onto your computer the latest Liebert IntelliSlot Unity card firmware update from the Liebert software download Web site at www.liebert.com
2. If the card's DHCP or Static-IP address is known, type the IP address in the Web browser address window.
3. If the card does not have a known IP address and it is configured for DHCP, connect the card to a computer with an Ethernet cable and open a Web browser. The card has an Ethernet RJ-45 connector on the front (see **Figure 6-1**). The card and computer will automatically negotiate communications, which will take about one minute (for details on autoconfiguration, see **2.1.2 - Connect an Ethernet Cable**). When communication is established, open a Web browser and enter the address **169.254.24.7**, the card's default Autoconfiguration IPv4 Address. The card's Web page will appear.

Figure 6-1 Ethernet port

Liebert IntelliSlot
Card Ethernet Port

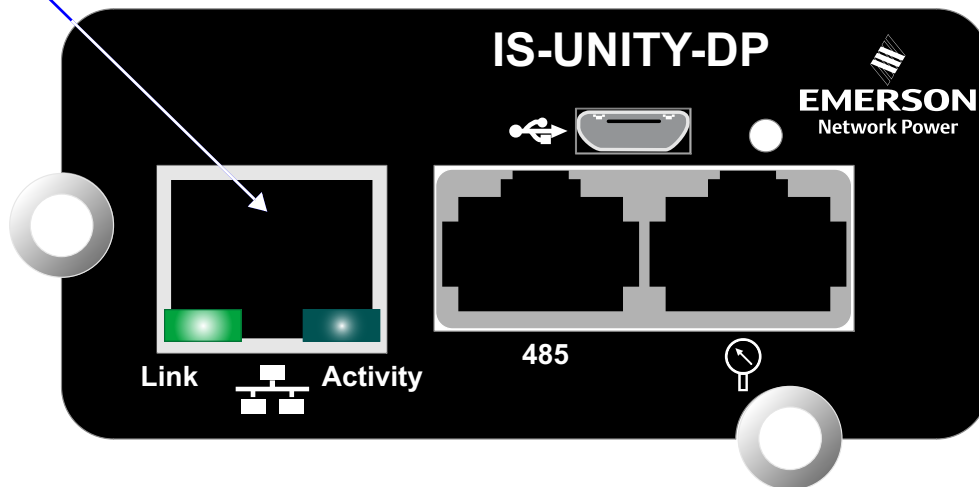

4. Select the Communications Tab at the top of the screen, then the Support folder from the Communications folders on the left of the screen and then the Firmware Update folder.
5. Select the **Enable** button.
6. Enter the administrator user name and password selected previously (see **2.2 - Change User Names and Passwords Immediately**) in the security dialog box that appears.

7. Click on the **Web** button and the firmware update screen will appear.
8. Browse to the firmware file to update, select it and click the **Update Firmware** button.

**NOTE**

Do not navigate away from the Firmware Update screen and do not close the browser once the update begins. Either action will interrupt the download.

Figure 6-2 Firmware update screen

The screenshot shows the Liebert IntelliSlot Unity web interface. The top navigation bar includes 'EMERSON Network Power', 'APS', 'Unity', and 'Liebert'. The 'Firmware Update' section is active, showing a table of status information and a 'Commands' section with 'Enable', 'Run Alternate', and 'Web' buttons. The 'Web' button is highlighted with a blue circle and an arrow pointing to a login dialog box. The dialog box contains fields for 'Username' and 'Password' and 'Login' and 'Cancel' buttons. Annotations include: 'Enable Button' pointing to the 'Enable' button; 'Support Folder' pointing to the 'Support' folder in the left sidebar; 'Firmware Update' pointing to the 'Firmware Update' folder in the left sidebar; and 'User name and password must be entered to update firmware' pointing to the login dialog box.

Status	Value	Units
Current Firmware Version	4.0.0.0	
Current Firmware Label	IS-UNITY_4.0.0.0_83532	
Current Firmware Date	Feb 28 2014 - 15:33:57	
Alternate Firmware Version	3.1.0.0	
Alternate Firmware Label	IS-UNITY_3.1.0.0_82316	
Alternate Firmware Date	Jan 9 2014 - 15:52:31	

Commands

Command	Action
Run Alternate Firmware	Run Alternate
Firmware Update	Web

Administrator login is required.

Username:

Password:

Login Cancel

6.2 Revert to Alternate Firmware

The Liebert IntelliSlot Unity card has two areas in flash memory for the firmware and the configuration. One area is currently operating on the card. The other area is considered an alternate.

When a card's firmware is updated, the previous firmware and configuration are moved to the alternate area. The Liebert IntelliSlot Unity card allows returning to the firmware version and configuration that are kept in the alternate area.

**NOTE**

Reverting to an alternate firmware version will not be possible if the currently operating firmware is the initial version loaded on the Liebert IntelliSlot Unity card. If the initially loaded firmware is still running on the card, the Alternate Version fields will be blank, and it will not be possible to revert to an alternate version.

1. Select the Communications Tab at the top of the screen.
2. Select the Support folder, then select the Update Firmware folder.

3. Select the **Enable** button.
4. Enter the user name and password in the security dialog box that appears; use the administrator user name and password from the user settings.
5. Click on the **Run Alternate** button and a confirmation dialog box will appear.
6. Click the **OK** button on the confirmation dialog box.



NOTE

The card will reboot. After the reboot, the card will be running the previous version of the firmware and configuration, which had been stored in flash memory. The previous firmware and configuration will have been moved to the alternate area.

APPENDIX A - CONFIGURATION FOLDER—LIFE™ SUB FOLDER

The LIFE sub folder contains settings that affect use of the Emerson® LIFE Technology, a remote monitoring and diagnostic service for Emerson units. The LIFE settings are for use by trained Emerson Network Power personnel only and require no user changes.

Status	Description
Connection Media	The LIFE Technology connection media
Enable Date and Time	The date and time that LIFE Technology support was enabled.
Settings	Description
LIFE Technology	Enable or disable the LIFE Technology
System Serial Number	System serial number, obtained from the unit automatically
Site Equipment Tag Number	Site equipment tag number
Site Identifier	Site identifier, entered by the Service Technician
Answer Incoming Call	Enable answering of LIFE Watch Station incoming calls
Next Call Date and Time	Date and Time of next call to make to the LIFE Watch Station server
Call Interval Days	Days between routine calls to LIFE Watch Station
Call Interval Hours	Number of hours between LIFE Watch Station routine calls
Call Interval Minutes	Number of minutes between routine LIFE Watch Station calls. This value is used in conjunction with val_life_callInterval_hours.
Call Trials Number	The number of attempts to retry a call after it fails before rescheduling the call.

UPS State SMS Messaging Configuration

Settings	Description
Primary Mains Restored SMS	Send SMS when Primary Mains are restored
Primary Mains Restored SMS Value	Value sent via SMS when Primary Mains are restored
Primary Mains Failure SMS	Send SMS when Primary Mains fail
Primary Mains Failure SMS Value	Value sent via SMS when Primary Mains fail
Bypass Mains Fail SMS	Send SMS when Bypass Mains fail
Bypass Mains Failure SMS Value	Value sent via SMS when Bypass Mains fail
Load On Bypass SMS	LIFE Load on Bypass SMS Enable
Load On Bypass SMS Delay	The amount of time to delay sending an SMS after a Load is on Bypass if the condition still exists.

Gate Settings

Status	Description
HTTP Transport Result	HTTP Transport Result contains the result of the last HTTP transaction.
HTTP Transport Error Value	HTTP Transport Error value from the last HTTP transaction
HTTP Transport Reply Time	HTTP transport reply time
Connection Result	IP connection result
Bridge State	IP Bridge state machine state
Error Count	Gate connection error count
Settings	Description
Proxy Enable	Enable Gate proxy
Proxy Authentication	Enable Gate proxy authentication
Proxy IP Address	Gate proxy IP address
Proxy IP Port Number	Gate proxy IP port number
Proxy User Name	Gate proxy user name
Proxy User Password	Gate proxy user password
LIFE Gate IP Address	LIFE Gate IP address
LIFE Gate IP Port Number	LIFE Gate Port Number

Advanced

Status	Description
Device State	Whether the device is connected or unconnected
Connection Status	The connection status of the Remote Service Delivery application system interface. This is the interface by which Remote Service Delivery services communicates with the Unity system software.
Call Type	The type of call currently in progress with the LIFE™ Watch Station server.
Scheduled Call Delay Time	The delay time before the next call to the LIFE Watch Station server.
Heartbeat Status	Device status as determined by heartbeat traps
Date and Time (UTC) of Last Call	The date and time (in UTC) of the LIFE Watch Station that was retrieved when the last successful call was made. YY-MM-DD HH:MM:SS
Commands	Description
Make Manual Call	Sends all currently collected events
Reset Scheduled Call Delay Time	Forces a rescheduled call to be done immediately
Reset Activity and Data	Resets all LIFE in-progress activity and deletes all LIFE data
Settings	Description
Service Mode	Enable or Disable LIFE service Mode

Technical Support / Service

Web Site

www.liebert.com

Monitoring

liebert.monitoring@emerson.com

800-222-5877

Outside North America: +00800 1155 4499

Single-Phase UPS & Server Cabinets

liebert.upstech@emerson.com

800-222-5877

Outside North America: +00800 1155 4499

Three-Phase UPS & Power Systems

800-543-2378

Outside North America: 614-841-6598

Environmental Systems

800-543-2778

Outside the United States: 614-888-0246

Locations

United States

1050 Dearborn Drive

P.O. Box 29186

Columbus, OH 43229

Europe

Via Leonardo Da Vinci 8

Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

+39 049 9719 111

Fax: +39 049 5841 257

Asia

29/F, The Orient Square Building

F. Ortigas Jr. Road, Ortigas Center

Pasig City 1605

Philippines

+63 2 687 6615

Fax: +63 2 730 9572

While every precaution has been taken to ensure the accuracy and completeness of this literature, Liebert Corporation assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

© 2013 Liebert Corporation

All rights reserved throughout the world. Specifications subject to change without notice.

® Liebert is a registered trademark of Liebert Corporation.

All names referred to are trademarks

or registered trademarks of their respective owners.

SL-52645_REV5

Emerson Network Power

Division: Liebert

Web: www.emerson.com